




RIFTEK

Sensors & Instruments

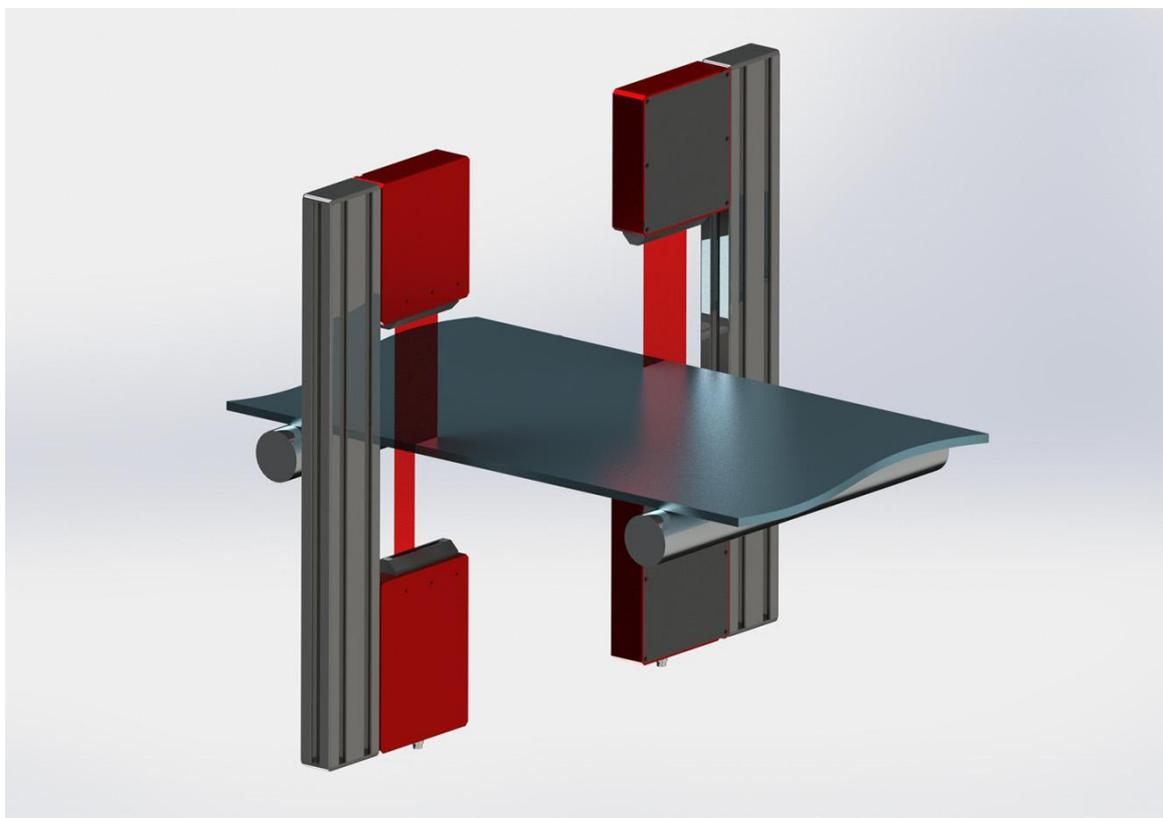

WIDTH MEASUREMENT SYSTEM

RF590 Series

User's manual

www.riftek.com
info@riftek.com

Contents

1. Safety precautions.....	3
2. CE compliance.....	3
3. Laser safety.....	3
4. General information.....	3
5. Structure and operating principle.....	3
5.1. Optical micrometers.....	4
5.2. System configuration.....	4
5.3. Indication device.....	5
6. Basic technical data.....	6
7. Example of item designation when ordering.....	6
8. Service program.....	6
8.1. Settings.....	7
8.1.1. Device settings.....	7
8.1.1.1. Language.....	7
8.1.1.2. Password.....	8
8.1.2. Parameters.....	9
8.1.2.1. Input settings.....	9
8.1.2.2. Output settings.....	9
8.1.2.3. Filter / Averaging.....	10
8.1.2.4. Parameters type.....	11
8.2. Measurement.....	12
8.3. Calibration.....	13
8.4. Database.....	14
9. Operating the system.....	15
9.1. Ethernet interface.....	16
9.1.1. Factory parameters table.....	16
9.1.2. Data packet format.....	16
9.2. Encoder input and Logical output.....	16
10. Technical support.....	17
11. Warranty policy.....	17
12. Revisions.....	17
13. Distributors.....	17

1. Safety precautions

- Use supply voltage and interfaces indicated in the system specifications.
- In connection/disconnection of cables, the system power must be switched off.
- Do not use the system in locations close to powerful light sources.
- To obtain stable results, wait about 20 minutes after sensor activation to achieve uniform sensor warm-up.
- The indication device must be grounded and connected to the grounding bus by a separate branch.

3

2. CE compliance

The system has been developed for use in industry and meets the requirements of the following Directives:

- EU directive 2014/30/EU. Electromagnetic compatibility (EMC).
- EU directive 2011/65/EU, "RoHS" category 9.

3. Laser safety

The system makes use of optical micrometers containing light-emitting diodes. Micrometers belong to Class 1 according to IEC/EN 60825-1:2014. The following warning label is placed on the housing:



The following safety measures should be taken while operating the micrometer:

- Avoid staring into the laser beam during a prolonged time period.
- Do not disassemble the micrometer.

4. General information

The system is intended for non-contact measuring of width of sheet materials such as tapes, boards, plates, and so on. It is a stand-alone software and hardware system that contains optical micrometers and the indication device.

System parameters can be changed for a specific task.

5. Structure and operating principle

The measurement method is based on the use of Optical micrometers (micrometer), which measure the position of edges of sheet material.

Depending on the width of the object, two versions of the system are possible: the system with one micrometer and the system with two micrometers.

5.1. Optical micrometers

The micrometer operation is based on the so-called ‘shadow’ principle. The micrometer consists of two blocks – transmitter and receiver. Radiation of a LED is collimated by a lens. With an object placed in the collimated beam region, shadow image formed is scanned with a CCD photo-detector array. A processor calculates the position of the object (sheet material) from the position of the shadow border (borders). The system can contain optical micrometers of RF651 series or of RF656 series:

<https://riftek.com/eng/products/~show/sensors/optical-micrometers>

5.2. System configuration

Depending on the width of the object, two versions of the system are possible: the system with one micrometer (the working range of the micrometer is greater than the width of the object), Scheme #1, and the system with two micrometers (the width of the object is greater than the working range of the micrometer), Scheme #2.

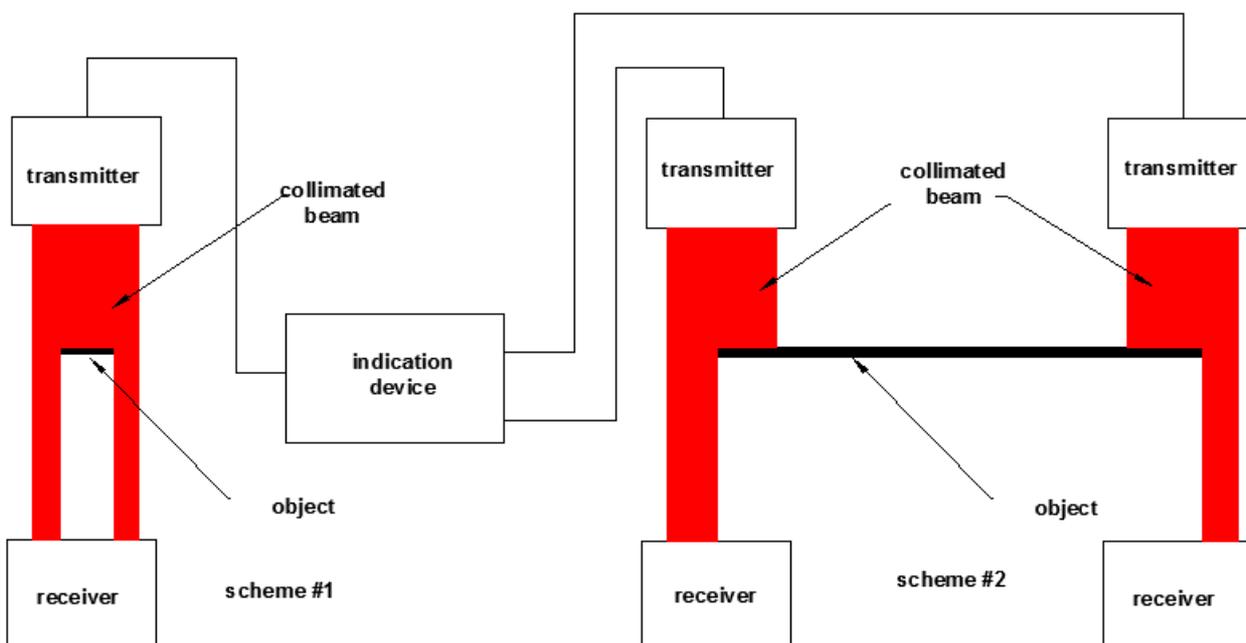


Figure 1. Scheme #1 with one micrometer (left) and Scheme #2 with two micrometers (right)

5.3. Indication device

The indication device is intended to receive information from micrometers, analyze and display the measurement results.

Micrometers must be connected via the special connectors mounted on the housing of the indication device. The LCD display with the touch screen shows information. When the width value exceeds the tolerances, the operator will be notified by an audible alarm. The width value output is based on the analysis of values received from the micrometer (micrometers) and calculated for the given averaging time, and is repeated with periodicity equal to the averaging time.

Overall and mounting dimensions of the indication device:

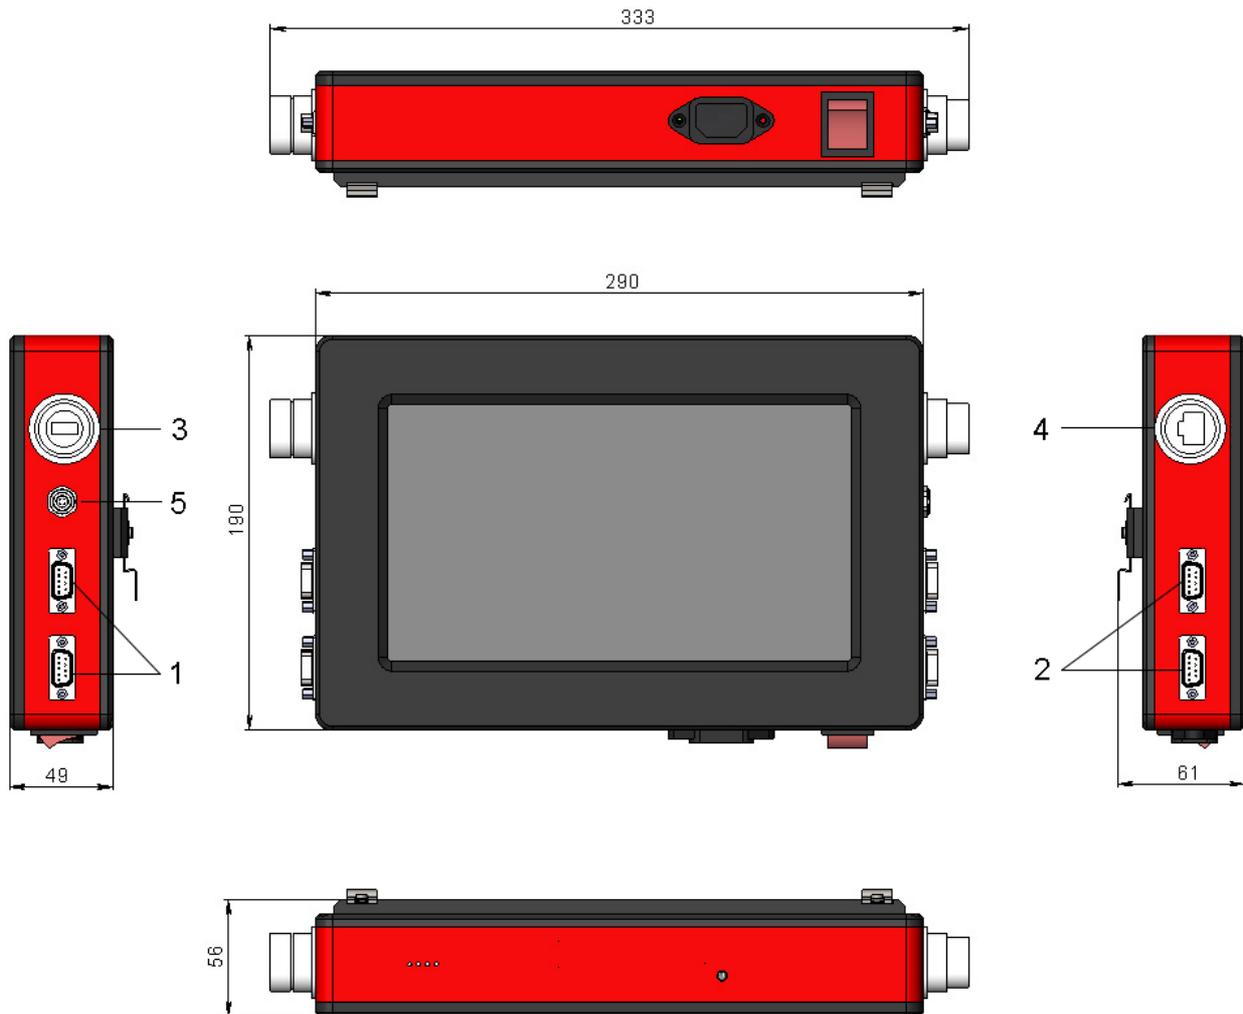


Figure 2. Overall and mounting dimensions of the indication device

Designations:

- 1 - DB9 connectors for connecting the micrometers;
- 2 - DB9 connectors for connecting the micrometers;
- 3 - USB;
- 4 - Ethernet;
- 5 - Encoder input and Logical output.

6. Basic technical data

Parameter	Value	
Width measurement range, mm	by request	
Width measurement accuracy, μm	up to ± 1 μm , depending on the accuracy of the micrometer used in the system	
Input interface (micrometers connection)	RS485	
Output interface (result transfer)	Ethernet	
Logical output (OK/NOK)	Open collector	
Encoder input	TTL	
Software update, data transfer	USB	
Measurement speed, measurements/second	up to 10000	
Power supply, V	220 V (± 10 %) AC, with frequency of 50 (± 1) Hz	
Power consumption, W	10	
Operating conditions	Ambient temperature, $^{\circ}\text{C}$	+1..+35
	Relative humidity, %	65 (at 25 $^{\circ}\text{C}$)

Note: System parameters can be changed for a specific task.


7. Example of item designation when ordering

RF590-MIN/MAX-SERIAL-N

Symbol	Description
MIN	Minimum width of the controlled object.
MAX	Maximum width of the controlled object.
SERIAL	Type of the micrometer serial interface: RS485 - 485, or Ethernet - ET.
N	Number of logic outputs.

8. Service program

When you switch on the indication device, the main program window appears:

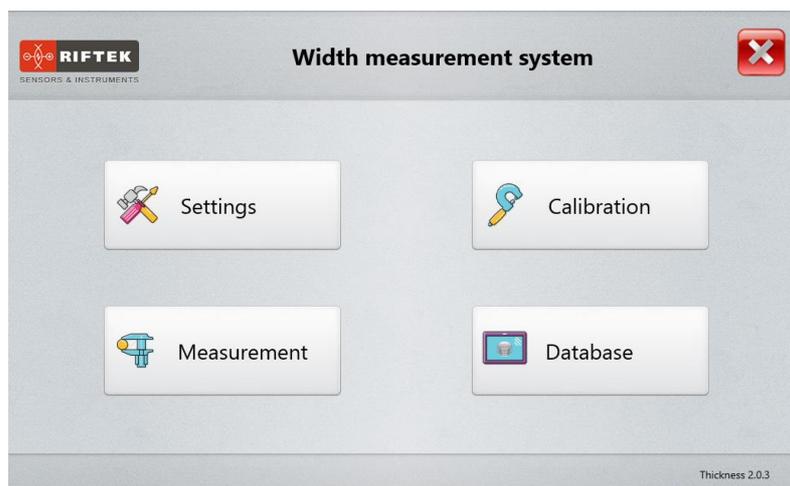


Buttons assignment:

Button	Assignment
Settings	Open the "Settings" window.
Measurement	Open the "Thickness measurement" window.
Calibration	Calibrate the system.
Database	Browse the database.

8.1. Settings

Before starting to work with the system, it is necessary to configure parameters. Tap the **Settings** button in the main window. The program will require a password. When initially installed, the program accepts the following password: 1111. Enter the password and tap **Ok**.

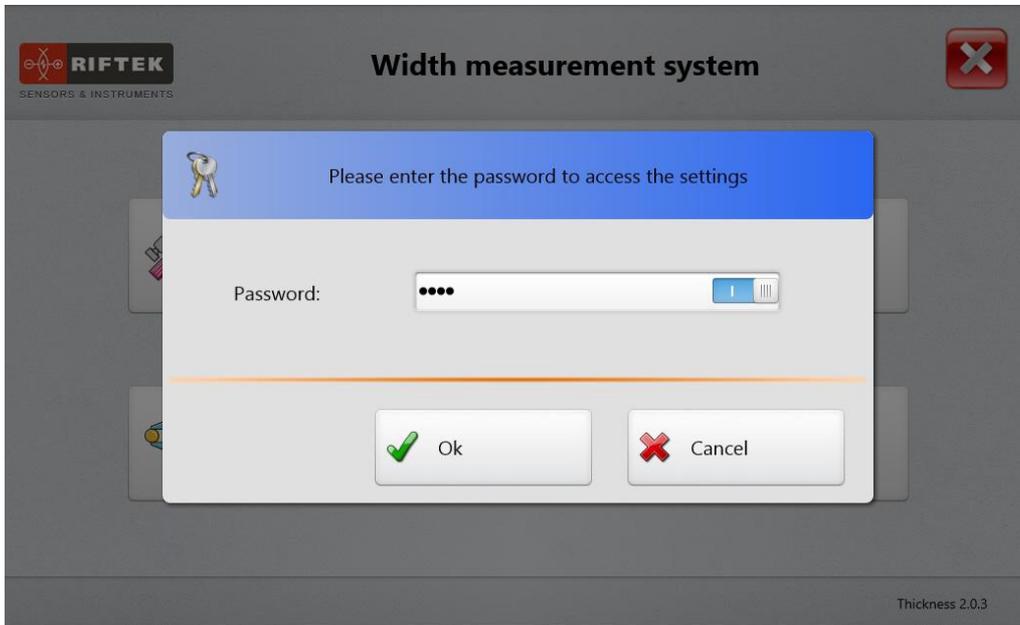


How to change the password, see Par. [8.1.1.2.](#)

8.1.1. Device settings


8.1.1.1. Language

In order to change the language of the program, tap **Language**, select the language support file, and tap **Select**.

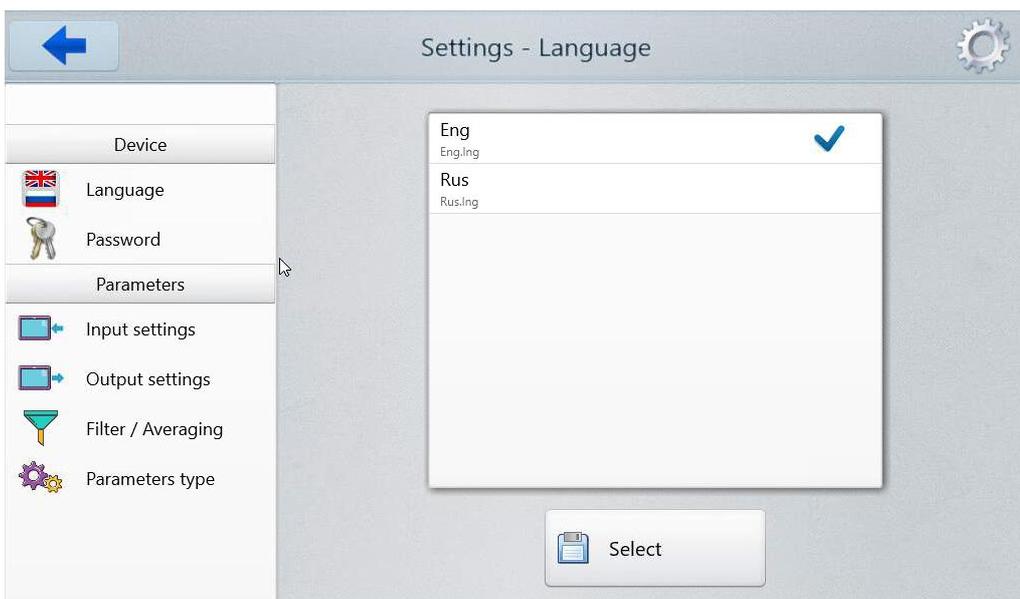


8.1.1.2. Password

To change the password, tap **Password**. Then enter a new password, confirm it, and tap **Save**.

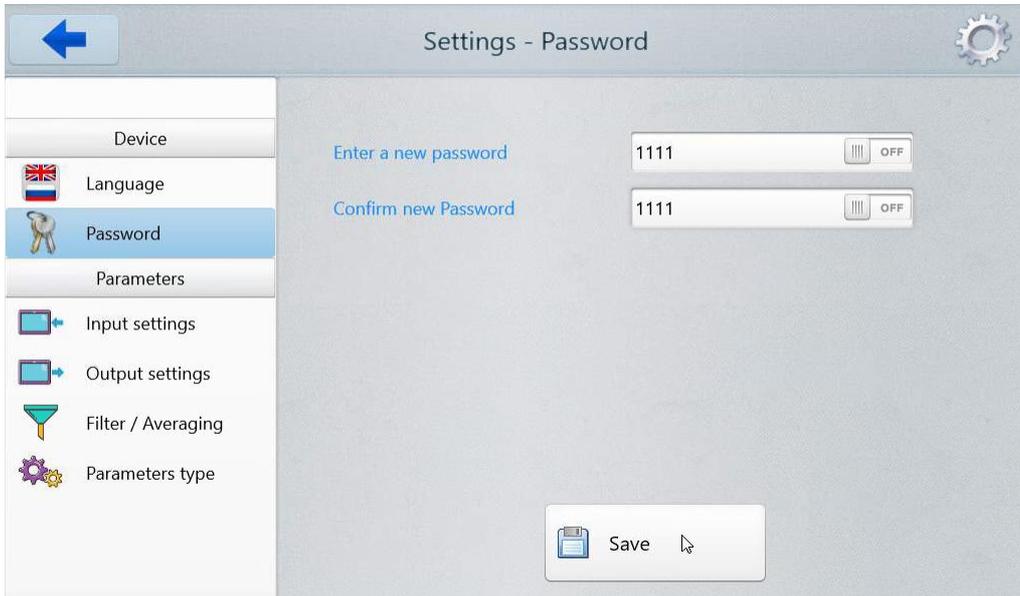

The program will prompt you to confirm the action:

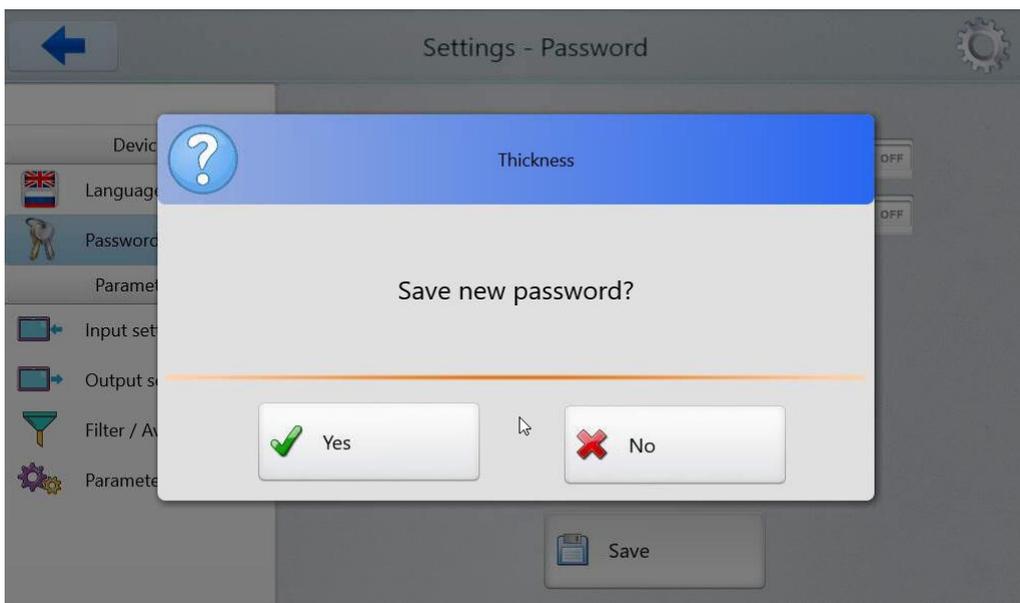


Select "Yes" to save a new password, or select "No" to cancel the action.

8.1.2. Parameters

8.1.2.1. Input settings

The **Input settings** tab:

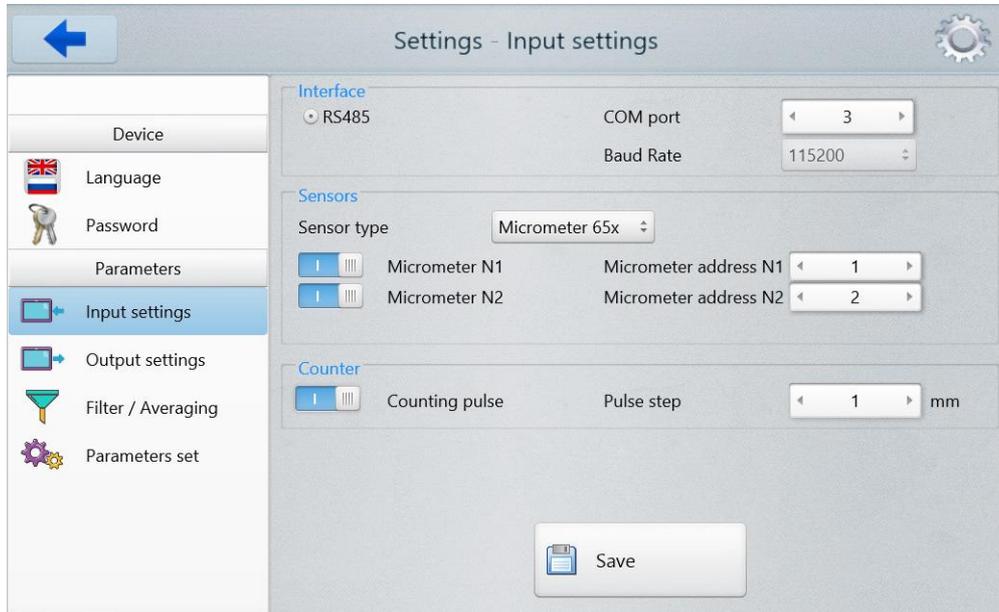

In the Interface settings area, the user can specify the COM port number and the baud rate.


In the Sensors settings area, the user can select the sensor type (60x or 65x), enable the sensors (ON / OFF buttons), and specify their network addresses.

In the Counter settings area, the user can enable the counter and specify the pulse step. **Note:** In this case, the pulse means, for example, the pulses from the encoder that characterize the movement of the object under control.

To save the changes, tap **Save**.

8.1.2.2. Output settings

The **Output settings** tab:

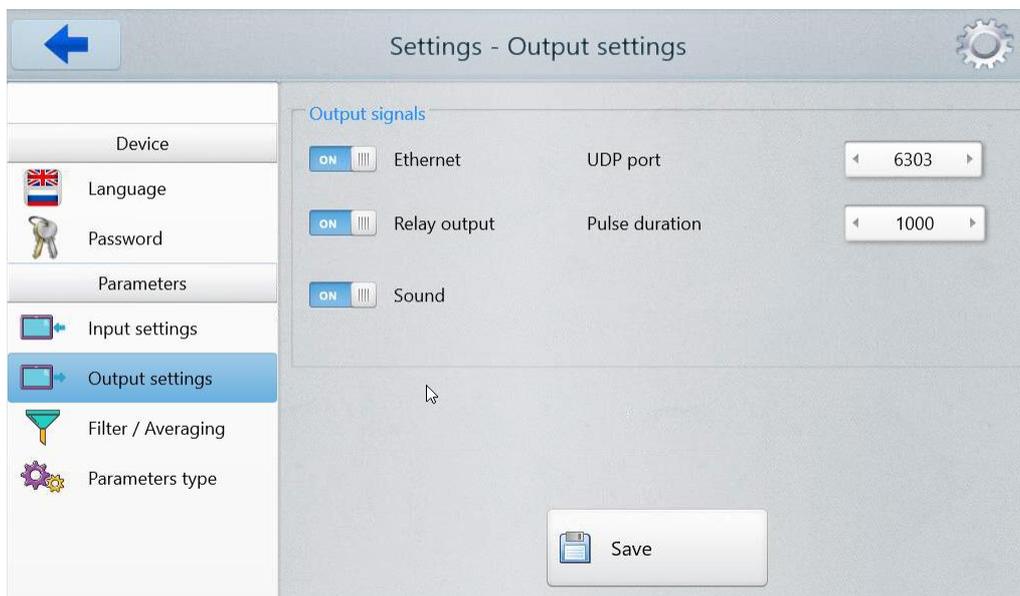


In the **Output settings** tab, the user can:

- enable the Ethernet interface;
- specify the UDP port;
- enable the relay output;
- enable an audible alarm ("Sound");
- specify the audible alarm duration ("Pulse duration").

To save the changes, tap **Save**.

8.1.2.3. Filter / Averaging

The **Filter / Averaging** tab:

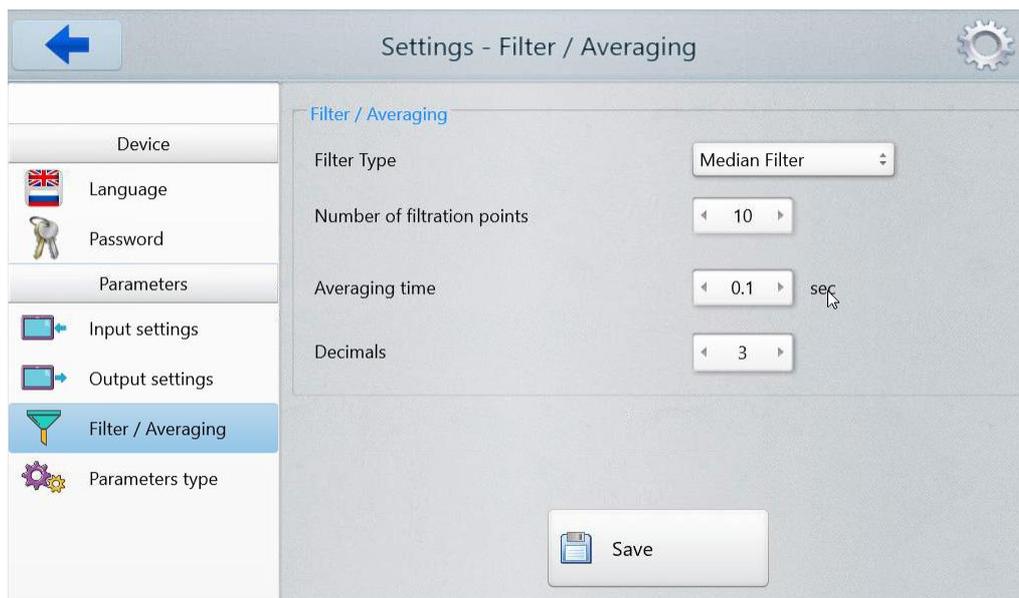

10

Filtering is intended to lower the noise of the measurement signal which results in a better resolution. The description of parameters is given in the table below.


Parameter		Description
Filter type	No filtering	Without filtering.
	Moving Average	The selectable number of filtration points for successive measured values is used to calculate and issue the arithmetic average. Each new measured value is added, the first (oldest) measured value is removed from the averaging.
	Median Filter	The median is formed from a preselected number of filtration points for measurement values. The incoming measured values are also sorted again after each measurement. Afterwards, the average value is output as the median. If an even number is selected as a number of filtration points, the two average measurement values are added and divided by two.
Number of filtration points		This parameter is used to specify the number of measurement values to which the filter applies.
Averaging time		The time for which the measurement results will be output/saved (for example, every 0.1 s).
Decimals		The number of decimals for the measurement results.

To save the changes, tap **Save**.

8.1.2.4. Parameters type

To work with the system, you need to select a set of parameters that will be used when you start the measurement process.

The **Parameters** tab for the measurement system:

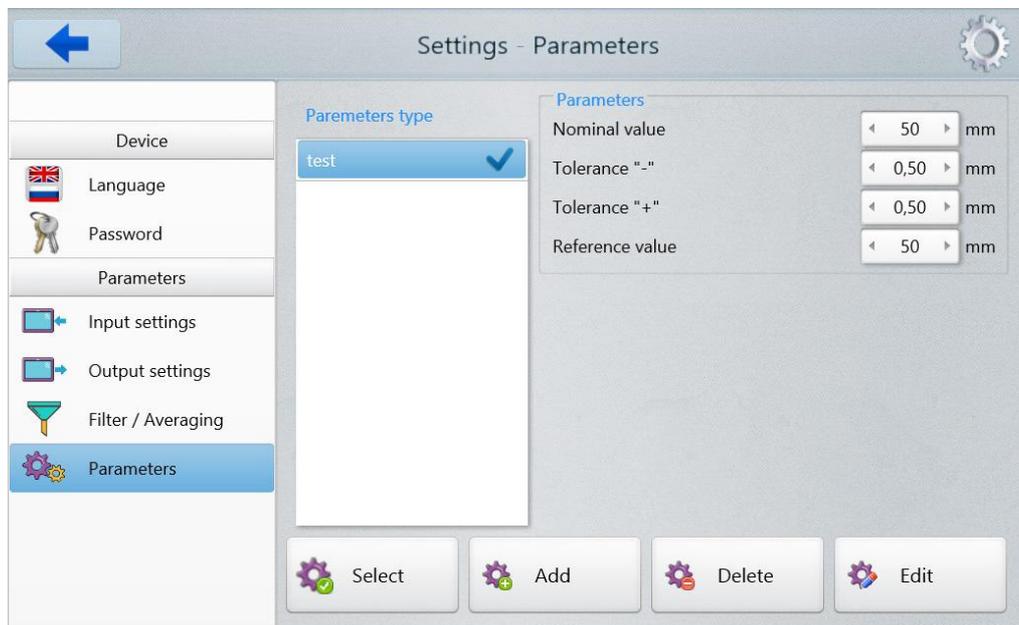

- **Selecting a set of parameters**

To select a set of parameters for using in the measurement process, tap it in the list of sets, and then tap the **Select** button.

- **Adding a new set of parameters**

Tap the **Add** button, specify the nominal value, tolerances, and reference value.

- **Deleting a set of parameters**


Tap it in the list of sets, and then tap the **Delete** button.

- **Editing a set of parameters**

Tap it in the list of sets, and then tap the **Edit** button.

8.2. Measurement

Tap the **Measurement** button in the main window. On the screen:

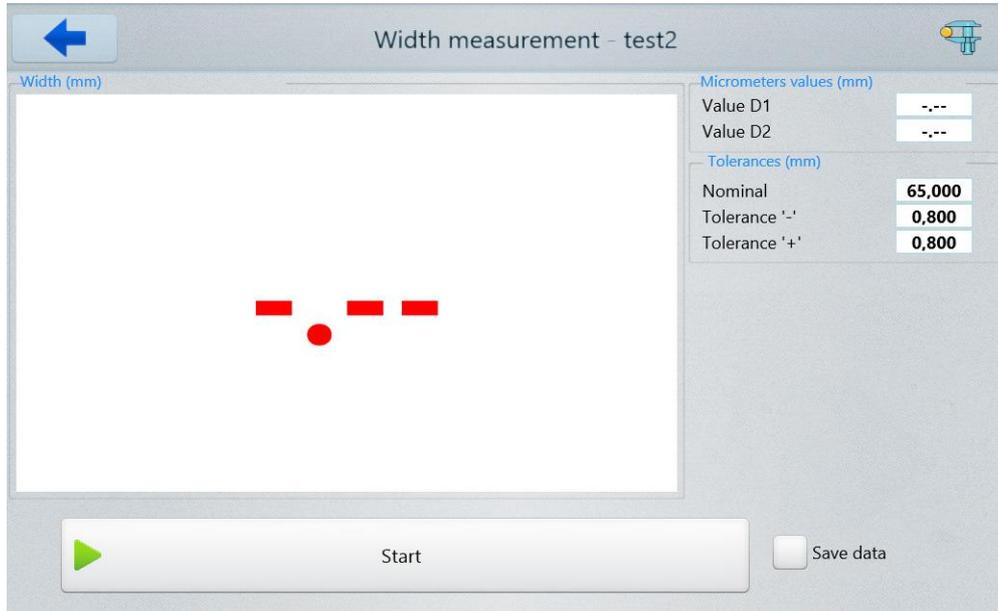


This window displays:

- name of the selected set of parameters (to the right of the window name);
- current width value (big green (or red) digits);
- values from the micrometers (**Value D1** and **Value D2**);
- nominal width value (**Nominal**);
- tolerances (**Tolerance '\-\'** and **Tolerance \'+\'**).

Tick the **Save data** box, if you want to save the measurement data to the database.

To start the measurement process, tap the **Start** button. On the screen:

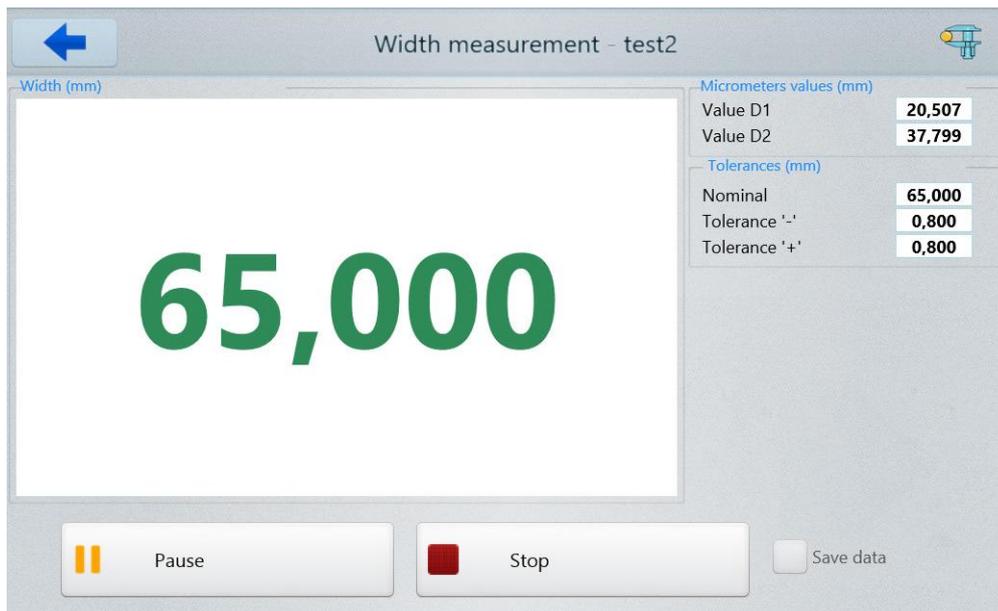

If needed, you can tap the **Stop** button to stop the measurement process, or tap **Pause** to pause the measurement process.

When the width value does not exceed the tolerances, it will be displayed in green color, otherwise - in red color.

8.3. Calibration

The width of the object is controlled within the working range of the micrometer (micrometers). For the measurement according to Scheme #1 (one micrometer), the calibration is not required. For Scheme #2 (two micrometers), it is necessary to perform the calibration procedure using the object of the known width.

Follow the steps below to perform the calibration procedure properly:

- Install the sample of the known thickness in the control area.
- Go to the **Settings** window. Tap **Parameters**, select a set of parameters, and make sure that the value in the **Reference value** field corresponds to the actual sample thickness value. If it doesn't, enter the actual sample thickness value into the **Reference value** field.
- Go back to the main menu and tap the **Calibration** button. The **Calibration** window appears. You will see a name of the selected set of parameters to the right of the window name. The **Calibration** window:



Micrometer 1		Value of micrometer(s)	
Serial number	---	Value D1	--- mm
Base distance	--- mm	Value D2	--- mm
Range	--- mm	Width	--- mm
Micrometer 2		Options	
Serial number	---	Reference value	50,000 mm
Base distance	--- mm	Calibration point	158,905 mm
Range	--- mm		

- Tap the **Connect** button in order to connect to the micrometers. The **Calibration** window:



Micrometer 1		Value of micrometer(s)	
Serial number	2217	Value D1	0,000 mm
Base distance	110 mm	Value D2	0,000 mm
Range	50 mm	Width	0,000 mm
Micrometer 2		Options	
Serial number	2317	Reference value	65,000 mm
Base distance	145 mm	Calibration point	52,661 mm
Range	75 mm		

- Tap the **Start** button in order to start the measurement process. Parameters **Value D1**, **Value D2**, **Width** and **Calibration point** take values equal to the values of micrometers in the micrometer coordinate system.
- Tap the **Calibration** button in order to start the calibration process. Parameters **Value D1**, **Value D2** and **Calibration point** are the values of micrometers in the micrometer coordinate system. The **Width** parameter (sample width value) takes values equal to the values of the micrometer in the coordinate system of a base surface, on which the sample is installed. The **Calibration** window:



Micrometer 1		Value of micrometer(s)	
Serial number	2217	Value D1	20,508 mm
Base distance	110 mm	Value D2	37,800 mm
Range	50 mm	Width	65,000 mm

Micrometer 2		Options	
Serial number	2317	Reference value	65,000 mm
Base distance	145 mm	Calibration point	58,308 mm
Range	75 mm		

- If the **Width** value is equal to the **Reference value**, it means that the calibration procedure was done properly. Tap the **Save** button.

8.4. Database


During the system operation, the thickness values are written to the database (if the **Save data** option is enabled, see Par. [8.2.](#)).

Tap the **Database** button in the main window. The **Database** window appears.


Select a set of measurements (you can find a list of sets to the left side of the window).

The data can be presented both in graphical form and in tabular form.

To browse the data in graphical form, tap . On the screen:

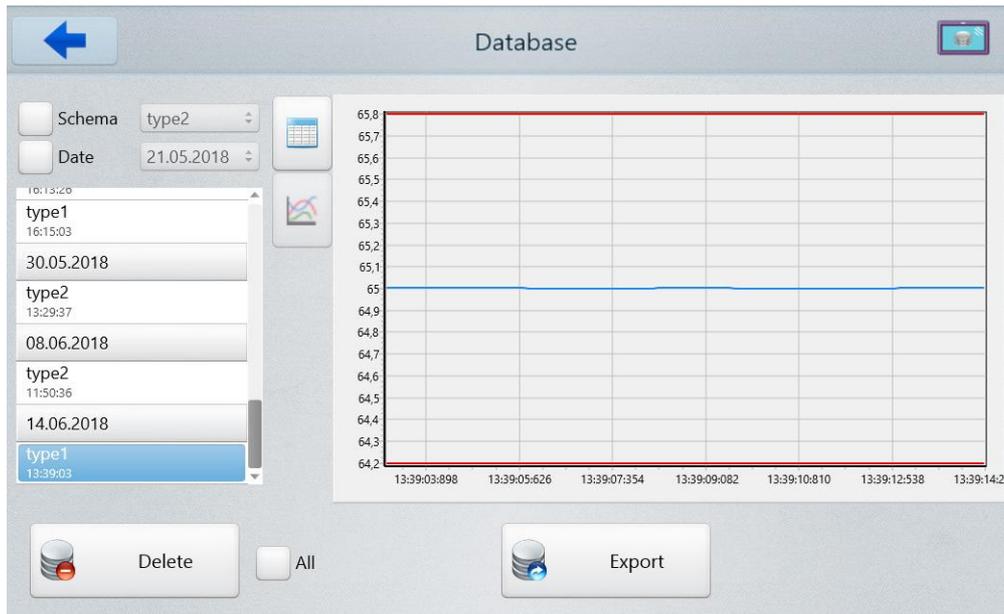

To browse the data in tabular form, tap . On the screen:

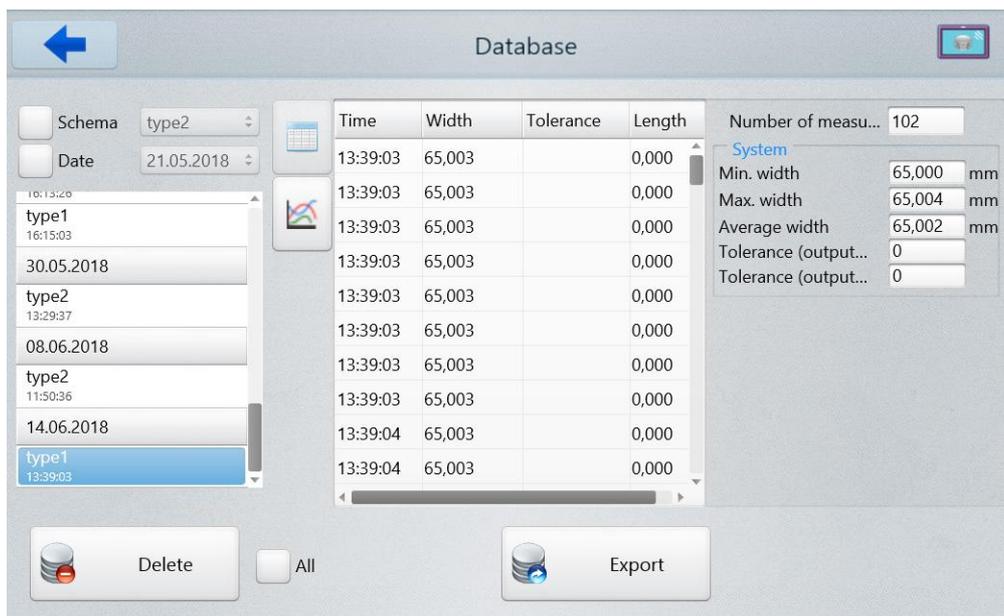

Time	Width	Tolerance	Length
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:03	65,003		0,000
13:39:04	65,003		0,000
13:39:04	65,003		0,000

Number of measu... 102

System

Min. width 65,000 mm

Max. width 65,004 mm

Average width 65,002 mm

Tolerance (output... 0

Tolerance (output... 0

To work with the table, use a vertical scrollbar.

To delete a single measurement, tap it in the table and then tap the **Delete** button.

To delete all measurements, tick the **All** box, and tap the **Delete** button.

The data can be exported to CSV, XLS, and XML.

To export the data, tap the **Export** button, and select a format.

9. Operating the system

Follow the steps below:

- Install the micrometers.
- Set parameters (see Par. [8.1.2](#)).
- Perform the calibration procedure (see Par. [8.3](#)).
- Start the measurement process (see Par. [8.2](#)).

9.1. Ethernet interface

The Ethernet interface is used only to transmit the width value.

9.1.1. Factory parameters table

Parameter	Value
Destination IP address	192.168.1.200
Gateway IP address	192.168.1.1
Subnet mask	255.255.255.0

9.1.2. Data packet format

The sensor transmits the UDP packet to destination port 6303.
The packet consists of a header field (8 bytes) and a data field (4 bytes).

Data field:

- byte 0, byte 1: beginning of the packet - [0x55,0xAA]
- byte 2, byte 3: device serial number
- byte 4, byte 5: packet number
- byte 6, byte 7: data size - [4 bytes]
- byte 8, byte 9, byte 10, byte 11: measurement result

Example of data packet:

55h, AAh, 6Dh, 5Dh, 79h, 02h, 04h, 00h, 8Ah, C0h, 08h, 00h

55h, AAh - beginning of the packet

6Dh,5Dh - device serial number [s\n 23917]

79h, 02h - packet number [cnt = 633]

04h, 00h - data size [4 bytes]

8Ah, C0h, 08h, 00h - data [D = 0008C08Ah = 573578]

The result (in mm) is calculated by the following formula:


$$X = D / 10000 = 573578 / 10000 = 57,3578 \text{ mm}$$

9.2. Encoder input and Logical output

The open collector is triggered when the width value exceeds the tolerance.
View from the side of connector contacts used in the system is shown below.

Binder on cable

- pins 1,2 - Pulse input
- pins 3,4 - Relay output

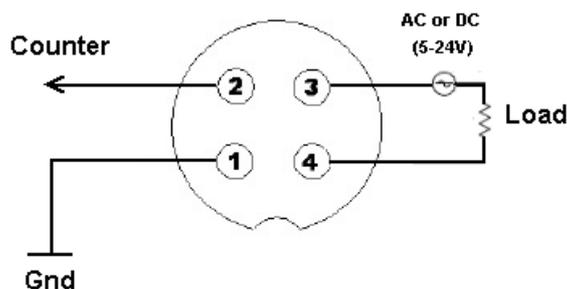

10. Technical support

Technical assistance related to incorrect work of the system and to problems with a service program is free.

Requests for technical assistance should be addressed to support@riftek.com, or by phone +375-17-2813513.

11. Warranty policy

Warranty assurance for the Width Measurement System RF590 Series - 24 months from the date of putting in operation; warranty shelf-life - 12 months.

12. Revisions

Date	Revision	Description
18.06.2018	1.0.0	Starting document.

13. Distributors

AUSTRALIA

**Applied Measurement
Australia Pty Ltd**
RAILWAY INSTRUMENTS ONLY
Thornton Plaza, Unit 5,
27 Thornton Crescent, Mitcham
VIC 3132, Australia
Tel: +61 39874 5777
Fax: +61 39874 5888
sales@appliedmeasurement.com.au
www.appliedmeasurement.com.au

BELGIUM

**Althen Sensors & Controls
BV**
Verrijn Stuartlaan 40, 2288 EL,
Rijswijk, Leidschendam
The Netherlands
Tel: +31 0 70 392 4421
Tel: +31 0 61 396 7830
Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

BOSNIA AND HERZEGOVINA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

BRAZIL

**CAPI Controle
e Automação Ltda**
Rua Itororó, 121, CEP 13466-240
Americana-SP, Brazil
Tel: +55 19 36047068
Fax: +55 19 34681791
capi@capicontrôle.com.br
www.capicontrôle.com.br

BULGARIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CHILE

MOL INGENIERIA LTDA
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
República de Honduras 11936
Las Condes, Santiago de Chile
Tel: +56 9 59200362
hconcha@molingeneria.com
www.molingeneria.com

CHILE

Verne SpA
Apoquindo 2818, oficina 31
Las Condes, Santiago, Chile
Tel: +56 2 228858633
info@verne.cl
jsaavedra@verne.cl
www.verne.cl

CHINA

**Beijing Haiwei Lutong
Technology Co., Ltd**
Yard 1, Tianxing Street, Fangshan
District, Beijing, China
Tel: +86 10 8366 1866
Fax: +86 10 8366 1866
info@haiwlt.com
www.haiwlt.com

CHINA

**Chongqing Wolf Industrial
Technology Co., Ltd**
Room 2307 / 2308, Light of City
international business building,
No. 19 Jiangnan Avenue, Nan'an
District, Chongqing, China
Tel: 023 62832618
Fax: 023 62832113
info@wolf-hk.com
www.wolf-hk.com

CHINA**Beijing Gemston Mechanical & Electrical Equipment Co., Ltd**

RAILWAY INSTRUMENTS ONLY
Room 613, Anfu Mansion, Fengtai District, Beijing, China
Tel: +86 10 6765 0516
Fax: +86 10 6765 6966
Mobile: +86 137 1755 1423
dh0526@163.com
www.baoft.cn

CHINA**Zhenshangyou Technologies Co., Ltd**

Rm 2205-2210, Zhongyou Hotel
1110 Nanshan Road, Nanshan District 518054 Shenzhen, China
Tel: +86 755-26528100/8011/8012
Fax: +86 755-26528210/26435640
info@51sensors.com
www.51sensors.com

DENMARK**BLConsult**

Ryssbält 294
95 291 Kalix, Sweden
Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

FINLAND**TERÄSPYÖRÄ-STEELWHEEL OY**

RAILWAY INSTRUMENTS ONLY
Juvan teollisuuskatu 28
FI-02920 ESPOO, Finland
Tel: +358 400 422 900
Fax: +358 9 2511 5510
steelwheel@steelwheel.fi
www.terasporyora.fi

GERMANY**Finger GmbH & Co. KG**
OPTICAL MICROMETERS ONLY

Sapelloh 172, 31606
Warmen, Germany
Tel: +49 5767 96020
Fax: +49 5767 93004
finger@finger-kg.de
www.finger-kg.de

CHINA**Xi'an Win-Success Automation Technology Co.,Ltd**

Room 3-1-1039, Iduhui Building,
No.11 Tangyan South Road
High-Tech Zone, Xi'an
Shaanxi PRC, China
Tel: +86 29 81106280
Fax: +86 29 81106285
Mob: +86 133 19271405
info@maxsensor.com
www.maxsensor.com

CROATIA**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

ESTONIA**FoodLab OÜ**

Haabersti linnaosa, Astangu tn 52
13519 Eesti, Tallinn, Estonia
Tel: +372 56 363110
foodlab.ee@gmail.com

FRANCE**BLET Measurement Group S.A.S.**

1 avenue du Président Georges
Pompidou, 92500 Rueil
Malmaison, France
Tel: + 33 0 1 80 88 57 85
Fax: +33 0 1 80 88 57 93
technique@blet-mesure.fr
www.blet-mesure.fr

GERMANY**ALTHEN GmbH Meß- und Sensortechnik**

Dieselstrasse 2, 65779
Kelkheim, Germany
Tel: +49 0 6195 7 00 60
info@althen.de
www.althensensors.com/de/

CHINA**Micron-Metrology co., Ltd**

No.2, Kecheng Rd., Industrial Park
District, Suzhou,
Jiangsu Province., China
Tel: 0512 65589760
Mob: +86 189 1806 9807
sales@micron-metrology.cn
www.micron-metrology.cn

CZECH REPUBLIC**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

FINLAND**Kvalitest Industrial AB**

EXCEPT FOR RAILWAY INSTRUMENTS
Ekbacksvägen 28,
16869 Bromma, Sweden
Tel: +46 0 76 525 5000
sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

GERMANY**Disynet GmbH**

Breyeller Str. 2, 41379
Brueggen, Germany
Tel: +49 2157 8799 0
Fax: +49 2157 8799 22
disynet@sensoren.de
www.sensoren.de

HUNGARY**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

INDIA**Influx Big Data Solutions Pvt Ltd**

No:2, Krishvi, Ground Floor,
Old Airport Road, Domlur,
Bangalore - 560071, India
Tel: +91 73 37748490
Tel: +91 94 48492380
milan@influxtechnology.com
support_india@influxtechnology.com
www.influxtechnology.com

ISRAEL**Nisso Dekalo Import Export LTD**

1 David Hamelech Street
Herzlia 46661 Israel
Tel: +972 99577888
Fax: +972 99568860
nissodekalotd@outlook.com
www.fly-supply.net
www.aircraft-partsupply.com

LATVIA**FoodLab OÜ**

Haabersti linnaosa, Astangu tn 52
13519 Eesti, Tallinn, Estonia
Tel: +372 56363110
foodlab.ee@gmail.com

MONTENEGRO**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

NORWAY**Salitec AS**

PB 468, N-1327
Lysaker, Norway
Tel: +47 23 891015
Fax: +47 92101005
mail@salitec.no
www.salitec.no

INDIA**Paragon Instrumentation Engineers Pvt. Ltd.**

RAILWAY INSTRUMENTS ONLY
200, Station Road,
Roorkee, 247 667, India
Tel: +91 1332 272394
tanuj@paragoninstruments.com
www.paragoninstruments.com

ITALY**FAE s.r.l.**

Via Tertulliano, 41
20137 Milano, Italy
Tel: +39 02 55187133
Fax: +39 02 55187399
fae@fae.it
www.fae.it

LUXEMBOURG**Althen Sensors & Controls BV**

Verrijn Stuartlaan 40, 2288 EL,
Rijswijk, Leidschendam
The Netherlands
Tel: +31 0 70 392 4421
Tel: +31 0 61 396 7830
Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

NETHERLANDS**Althen Sensors & Controls BV**

Verrijn Stuartlaan 40, 2288 EL,
Rijswijk, Leidschendam
The Netherlands
Tel: +31 0 70 392 4421
Tel: +31 0 61 396 7830
Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

PERU**Verne Perú S.A.C.**

Las Codornices 104,
Surquillo, Lima, Peru
Tel/fax: +51 992436734
info@verne.cl
www.verne.cl

INDONESIA**PT. DHAYA BASWARA SANIYASA**

Botanic Junction Blok H-9 NO. 7
Mega Kebon Jeruk, Joglo
Jakarta, 11640, Indonesia
Tel: +62 21 2932 5859
management@ptdbs.co.id

JAPAN**Tokyo Instruments, Inc.**

6-18-14 Nishikasai, Edogawa-ku,
Tokyo, 134-0088 Japan
Tel: +81 3 3686 4711
Fax: +81 3 3686 0831
f_kuribayashi@tokyoinst.co.jp
www.tokyoinst.co.jp

MALAYSIA**OptoCom InstruVentures**

H-49-2, Jalan 5, Cosmoplex
Industrial Park, Bandar Baru
Salak Tinggi, Sepang, Malaysia
Tel: 603 8706 6806
Fax: 603 8706 6809
optocom@tm.net.my
www.optocom.com.my

NORWAY**BLConsult**

Ryssbält 294,
95 291 Kalix, Sweden
Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

POLAND**ASCO RAIL sp. z o.o.**
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT

ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

POLAND

RIFTEK EUROPE sp. z o.o.
ul. Domaniewska 17/19, 02-672
Warsaw, Poland
info@riftek.com
www.riftek.com

SLOVAKIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SOUTH KOREA

PROSEN. CO., LTD
M-1001, Songdo techno park IT
center, 32, Songdogwahak-ro,
Yeonsu-gu, Incheon, 21984,
Republic of Korea
Tel: +82 32 811 3457
Fax: +82 32 232 7458
trade@prosen.co.kr
www.prosen.co.kr

SWEDEN

Kvalitest Industrial AB
**EXCEPT FOR RAILWAY
INSTRUMENTS**
Ekbacksvägen 28,
16869 Bromma, Sweden
Tel: +46 0 76 525 5000
sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

TURKEY

**MAK Elektronik Malzeme
Analiz ve Kalite Kontrol
Cihazlari Dis Tic. Ltd. Sti.**
Cenap Sahabettin Sokak, No:39,
34718 Kosuyolu - Kadikoy /
Istanbul - TURKEY
Tel: +90 216 402 10 34
Fax: +90 216 402 10 35
ulastac@metalografi.net
www.makelektronik.com.tr

PORTUGAL

**Campal Inovacoes
Ferroviarias Lda.**
Lagoas Park, Edificio 7, 1° Piso
Sul, 2740-244 Porto Salvo, Oeiras,
Portugal
Tel: +351 21 584 4348
campal@campal.pt
www.campal.pt

SLOVENIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SPAIN

IBERFLUID Instruments S.A.
C/ Botanica, 122, 08908
L'Hospitalet de Llobregat
Barcelona
Tel: +34 93 447 10 65
Fax: +34 93 334 05 24
myct@iberfluid.com
www.iberfluid.com

SWITZERLAND

ID&T GmbH
Gewerbstrasse 12/a
8132 Egg (Zurich), Switzerland
Tel: + 41 44 994 92 32
Fax: + 41 44 994 92 34
info@idtlaser.com
www.idtlaser.com

TURKEY

TEKMA Mühendislik A.S.
Cevizli Mh. M. Kemal Cd.,
Hukukçular Towers,
A-Blok, No: 66-A/39
Kartal - Istanbul
Tel: +90 216 970 1318
Tel: +90 850 840 2334
info@tekma.eu
www.tekma.eu

SERBIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SOUTH KOREA

BS Holdings
B-201, Wonpogongwon 1ro,
59 Danwon-gu, Ansan-si,
Gyeonggi-do 15455, Republic of
Korea
Tel: +82 31 411 5011
Fax: +82 31 411 5015
bsh5011@hanmail.net
www.lasersolution.co.kr

SWEDEN

BLConsult
Ryssbält 294,
95 291 Kalix, Sweden
Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

THAILAND

Advantech Solution Co., Ltd.
20/170 Motorway Rd.,
Kwang Pravet, Khet Pravet,
Bangkok, Thailand 10250
Tel: +662 1848705
Fax: +662 1848708
sales@advantechsolution.com
www.advantechsolution.com

UKRAINE

KODA
Frunze st. 22, 61002,
Harkov, Ukraine
Tel/Fax: +38 057 714 26 54
mail@koda.com.ua
www.koda.com.ua

UNITED KINGDOM,
IRELAND

Althen UK

Northamptonshire
United Kingdom
Tel: +44 0 7823 921427
t.stoyles@althen.co.uk
www.althensensors.com
www.althencontrols.com

USA

Althen Sensors & Controls

2531 Bradley St., Oceanside, CA,
92056, USA
Tel: 858 633 3572
r.ream@althensensors.com

USA, CANADA, MEXICO

**Acuity Products of Schmitt
Industries, Inc.**

2765 NW Nicolai Street
Portland, OR, 97210, USA
Tel: +1 503 227 7908
Fax: +1 503 223 1258
sales@acuitylaser.com
www.acuitylaser.com

USA, CANADA, MEXICO

**International Electronic
Machines Corporation**

RAILWAY INSTRUMENTS ONLY

850 River Street, Troy,
New York, USA
Tel: +1 518 268-1636
Fax: +1 518 268-1639
marketing@iem.net
www.iem.net