




RIFTEK
Sensors & Instruments

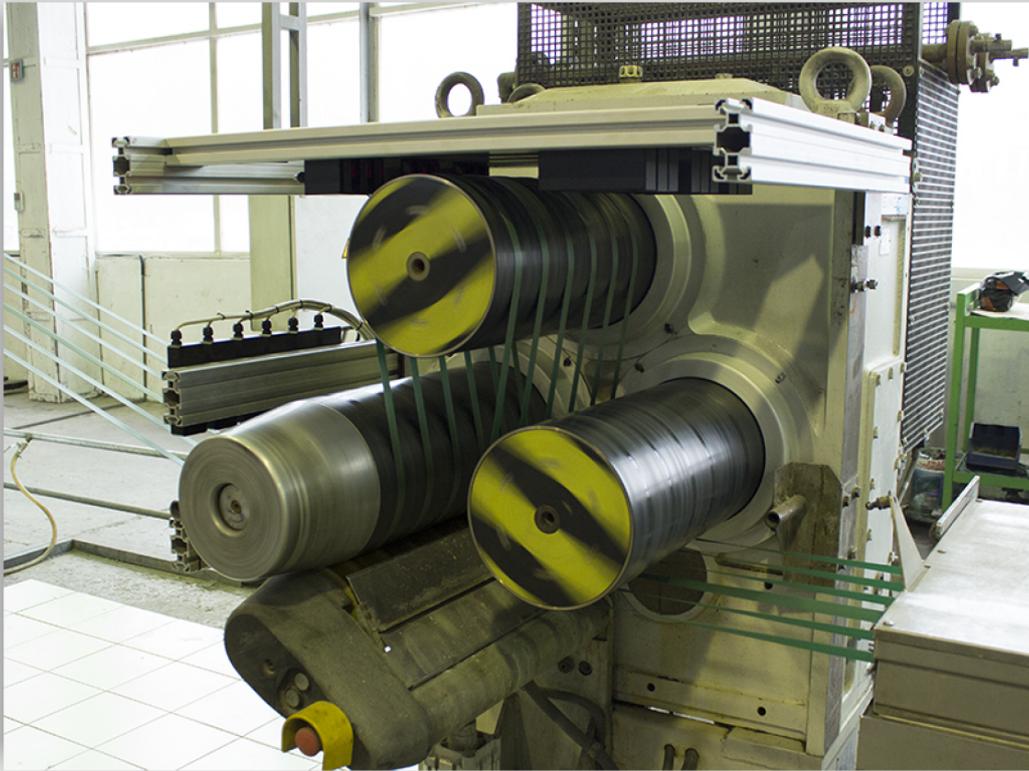

AUTOMATED SYSTEM FOR TAPES GEOMETRY MEASUREMENT

RF089 Series

User's manual

www.riftek.com
info@riftek.com

Contents

1	Safety precautions	3
2	CE compliance	3
3	Laser safety	3
4	General information.....	3
5	Structure and operating principle.....	3
6	Basic technical data.....	5
7	Overall and mounting dimensions.....	6
7.1	Measurement modules.....	6
7.2	PDA	7
8	Block diagram	7
9	Cable connections scheme.....	8
10	Software	8
10.1	Main functions.....	8
10.2	Measurements.....	8
10.3	Calibration.....	10
10.3.1	Calibration of the thickness measurement micrometers	10
10.3.2	Thermometers calibration	11
10.4	Settings	11
10.5	Measurement journal.....	12
11	Intended use	13
11.1	Preparation for use.....	13
11.1.1	External inspection	14
11.1.2	Set up on a conveyer	14
11.1.3	Switching the system	14
11.1.4	Calibrating the system	14
11.1.5	Configuring system settings	14
11.1.6	Checking the system	14
11.2	Operating the system.....	14
12	Maintenance	14
12.1	General instructions.....	14
12.2	Safety precautions.....	14
12.3	Maintenance procedure.....	14
12.3.1	Daily maintenance work	14
12.3.2	Regular maintenance work	15
12.3.3	Yearly maintenance work	15
12.4	Operability test.....	15
13	Warranty policy.....	15
14	Distributors	15

1 Safety precautions

- Use supply voltage and interfaces indicated in the sensor specifications.
- In connection/disconnection of cables, the micrometer power must be switched off.
- Do not use micrometers in locations close to powerful light sources.
- To obtain stable results, wait about 20 minutes after micrometer activation to achieve uniform micrometer warm-up.
- Elements of the system should be grounded and join the grounding bus through a separate line.

2 CE compliance

The system has been developed for use in industry and meets the requirements of the following Directives:

- EU directive 2014/30/EU. Electromagnetic compatibility (EMC).
- EU directive 2011/65/EU, "RoHS" category 9.

3 Laser safety

The micrometers make use LED or c.w. 660 nm wavelength semiconductor laser. Maximum laser output power is <0,2 mW. The micrometers belong to the 1 laser safety class. The following warning label is placed on the laser body.



The following safety measures should be taken while operating the sensor:

- Avoid staring into the laser beam during a prolonged time period;
- Do not disassemble the micrometer.

4 General information

The system is designed to control the geometrical parameters (width and thickness) and the temperature of the tapes, in particular, packing straps during the manufacturing process.

The system is applied in the mass production. Production line is the place of installation. Technical characteristics of the system can be changed for a specific task.

5 Structure and operating principle

Optical micrometers are used to control the geometrical parameters of the tapes.

The principle of width measurement is shown in Fig. 1.

Operation is based on the so-called 'shadow' principle. The micrometer consists of two blocks – transmitter and receiver. Radiation of a semiconductor laser or LED 1 is collimated by a lens 2. With a tape placed in the collimated beam region, shadow image formed is scanned with a CCD photo-detector array 3. A processor 4 calculates the position (size) of the tape from the position of shadow border (borders).

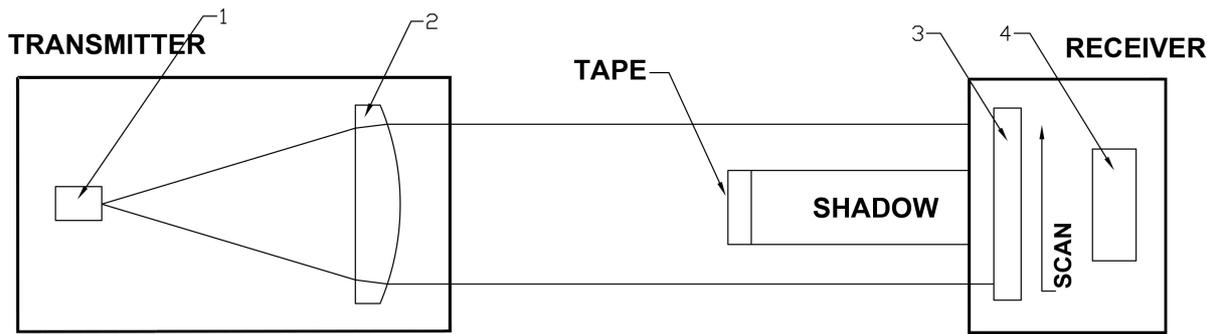


Figure 1

The principle of thickness measurement is shown in Fig. 2.

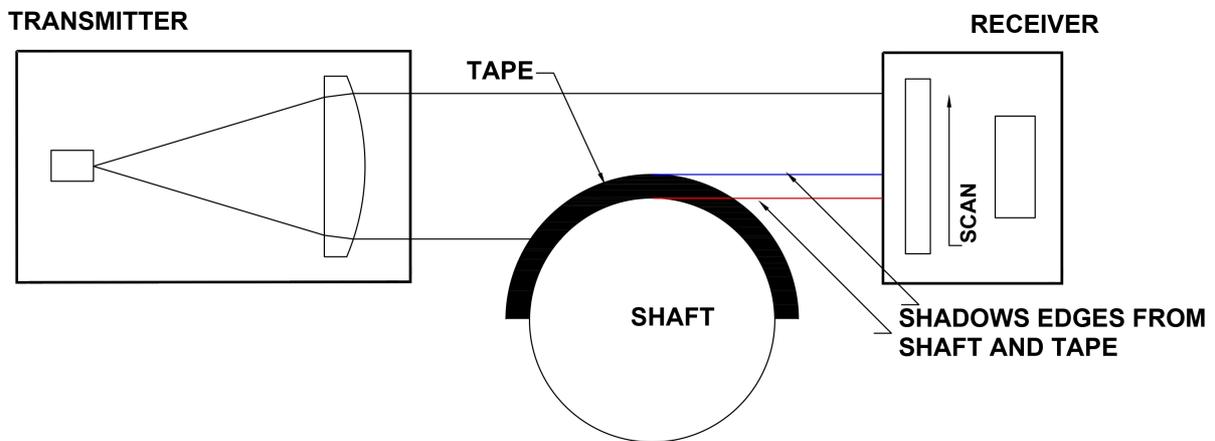


Figure 2

The tape thickness is calculated as the difference between the position of shadow borders of the tape and the shaft. The position of shadow border of the shaft is controlled by a stand-alone micrometer.

The structure of the control system is shown in Fig. 3.

The system contains a group of 6 optical micrometers 1 for simultaneous control of the tape width and the group of 9 micrometers, 6 of them are intended for simultaneous control of the tape thickness and 3 (subsidiary micrometers) – to control the shaft surface position. All micrometers are networked via RS485 interface in the switching center 3, which also includes the power supply of the entire system. The system contains the controller 4 (PDA) that is designed for data processing, indicating of the measurement results and data storage.

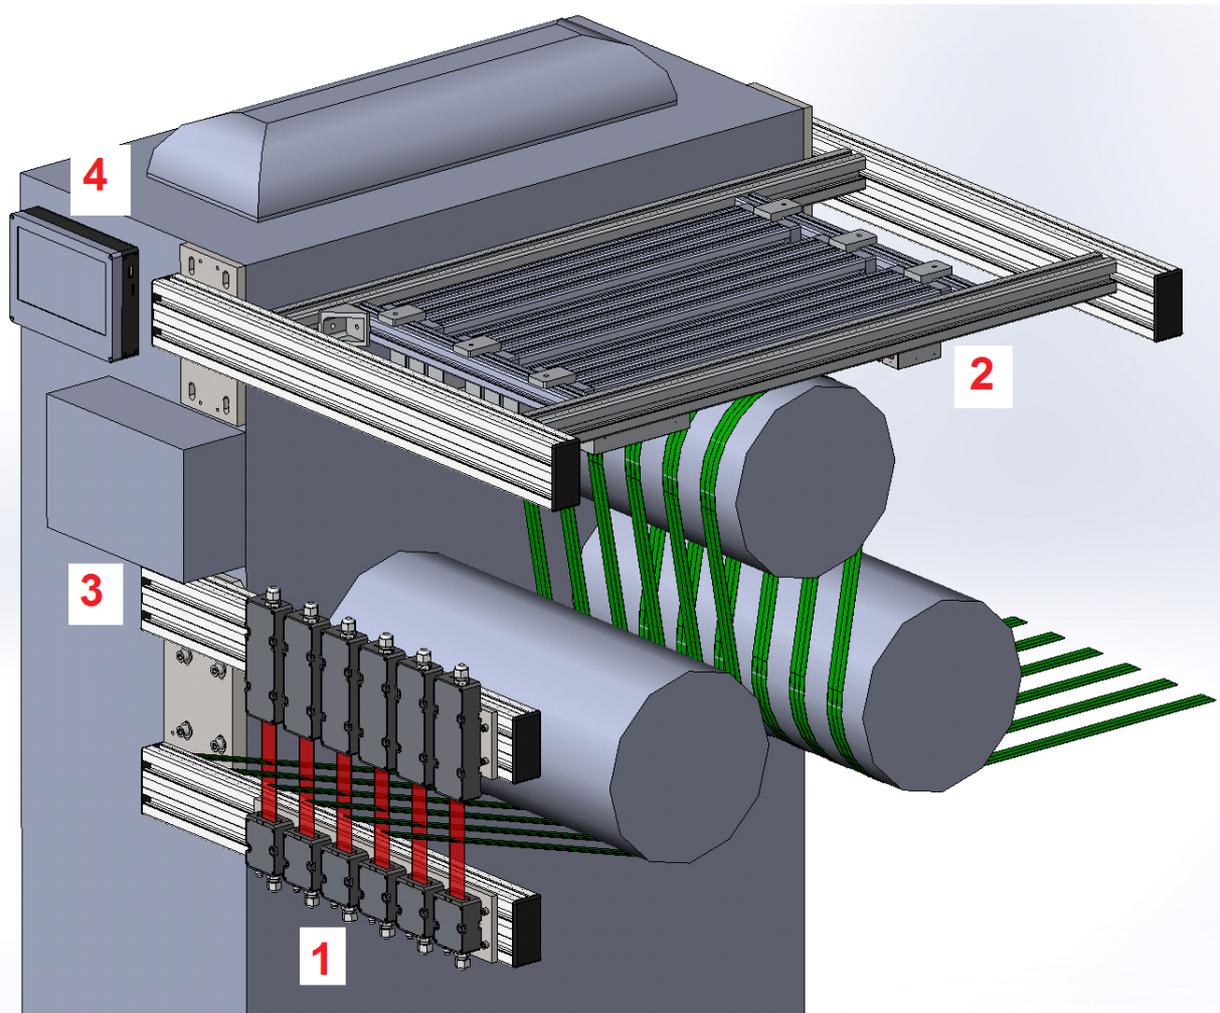


Figure 3

6 Basic technical data

Parameter	Value
Model of micrometer	RF651-25
Model of PDA	RF307
Model of temperature sensor	OMEGA OS-136-1-MA
Number of tapes controlled simultaneously	6
Number of temperature control points	3
Measurement range for the tape thickness, mm	0.02...20
Accuracy of the thickness measurement, μm	± 5
Measurement range for the tape width, mm	$\pm 0.2...20$
Accuracy of the width measurement, μm	± 10
Max measurement speed, measurement/s	2000
Power supply	three-phase AC network with frequency (50 ± 1) Hz, rated voltage 220/380V with a tolerance of $\pm 10\%$ voltage
Power consumption, W	4
Operation conditions	Temperature, $^{\circ}\text{C}$: +1...+35 $^{\circ}\text{C}$ Rel. humidity at 25 $^{\circ}\text{C}$: 65%

7 Overall and mounting dimensions

7.1 Measurement modules

Fig. 5 and 6 show the dimensions of measurement modules as well as their installation on equipment.

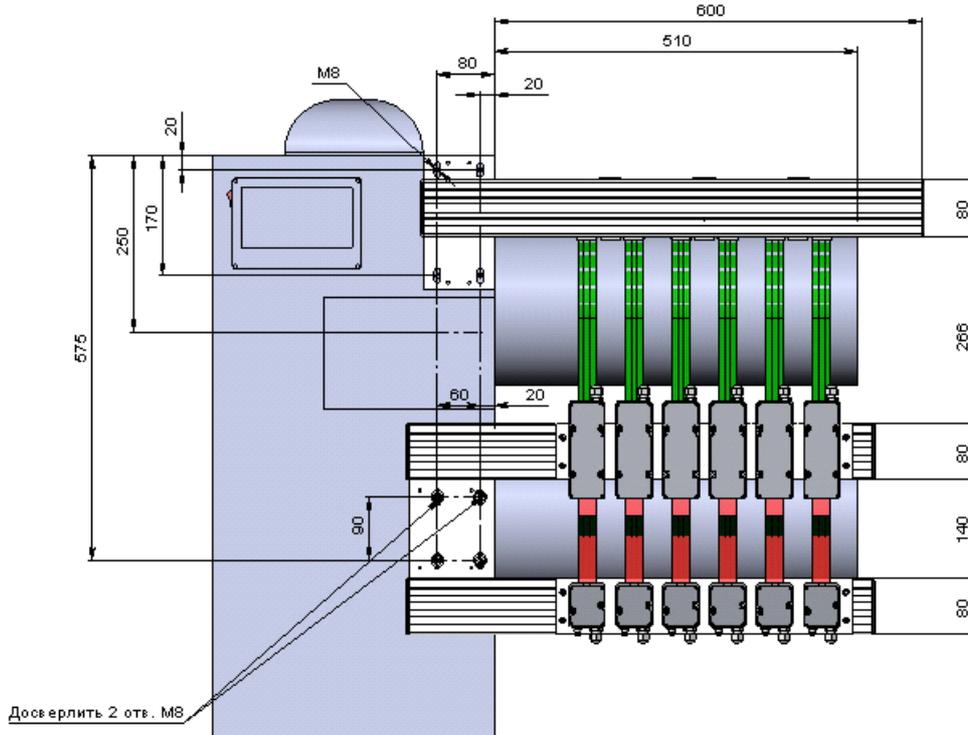


Figure 4

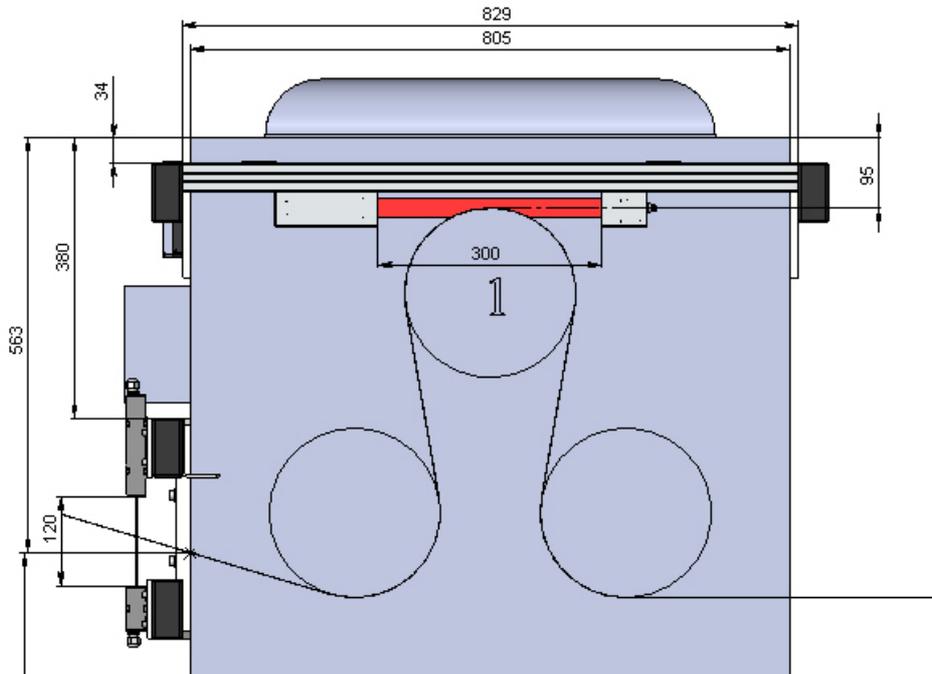


Figure 5

7.2 PDA

RF307 device is intended to process the data from the micrometers indicate results and store the data.

Fig. 6 shows overall dimensions of the device.

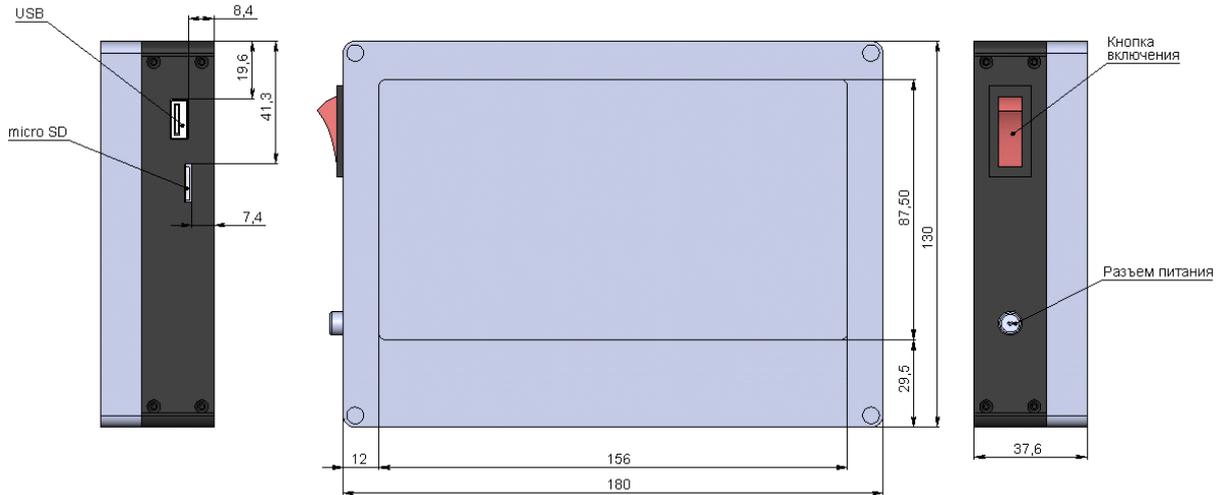


Figure 6

8 Block diagram

Fig. 7 shows the block diagram of the system.

Optical micrometers RF651 are linked via RS485 interface. Temperature sensors are included in the same network via ADC. The information from all micrometers and temperature sensors comes to the PDA RF307.

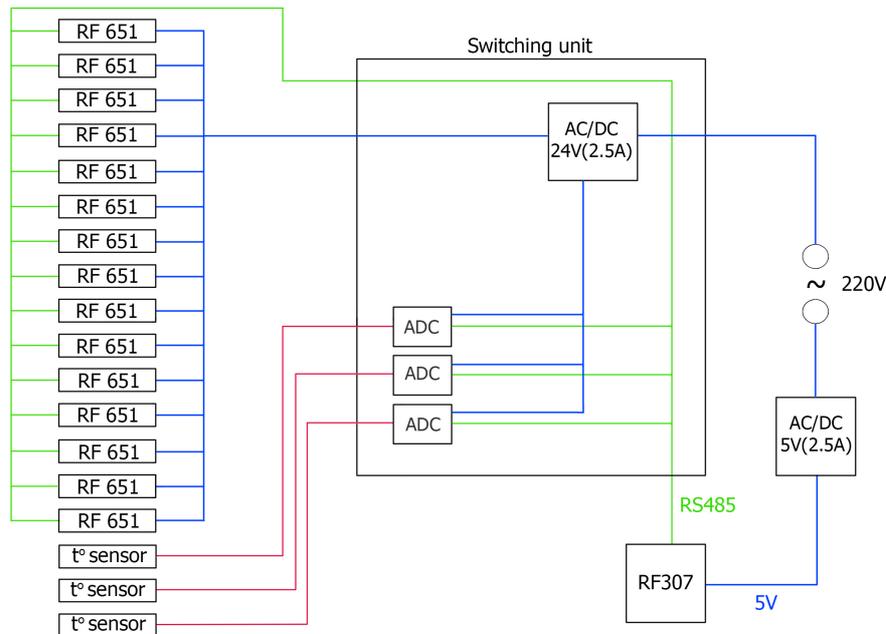


Figure 7

9 Cable connections scheme

Fig. 8 shows the cable connections.

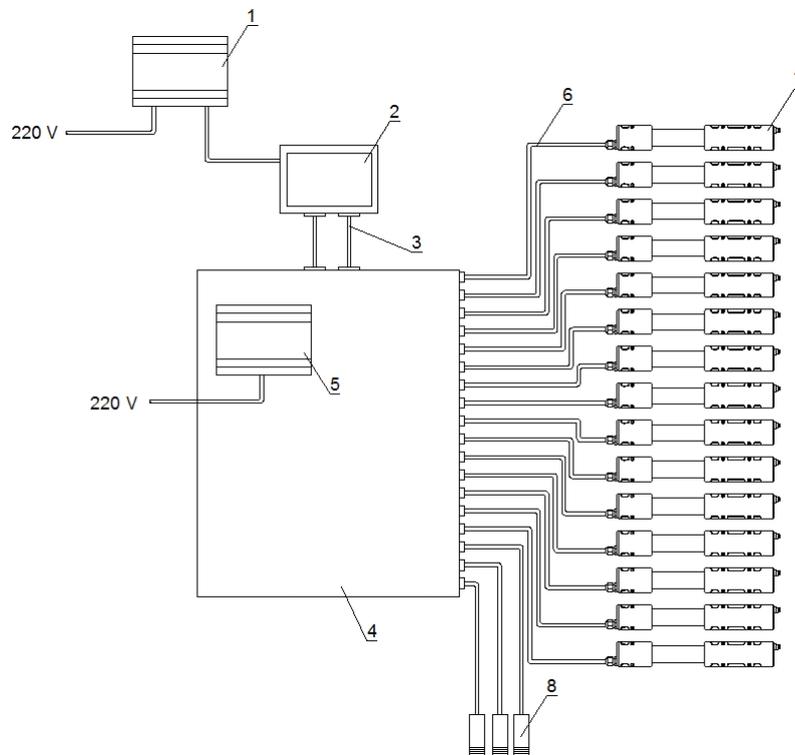


Figure 8

Fig. 8 indicates:

1 – power supply, 2 – PDA, 3, 6 – RS485 cable, 4 – switching center, 5 – power supply, 7 – micrometers RF651 (15 items), 8 – temperature sensors (3 items).

(!) The power should be switched off while mounting cable connections.

10 Software

10.1 Main functions

The software provides:

- receipt and analysis of data from micrometers and temperature sensors with display and storage of measurement results;
- indication out of the valid values;
- calibration of thickness measurement subsystem;
- system setup;
- system self-diagnosis.

10.2 Measurements

After being switched on the RF307 device loads the program and shows the main working window (Fig. 9):

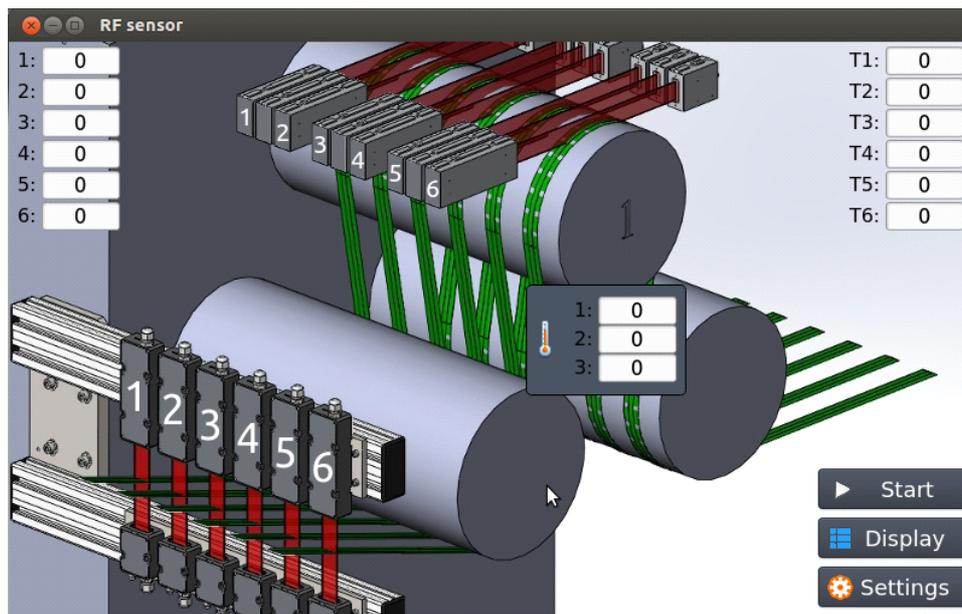


Figure 9

Press **Start** to initiate the measurement process. The results of measuring the width of strips are shown in the upper left part of the window, thickness – in the upper right and temperature – in the central part.

The width of the tape is the result of direct measurement of the micrometer.

The thickness of the tape - the result of indirect measurements, calculated as follows:

$$\text{Thickness} = (\text{Tape_sp} - \text{Shaft_cl}) - (\text{Shaft_sp} - \text{Shaft_cl}),$$

where

Tape_sp – the current position of the upper surface of the tape (indicated by the main micrometers, see p. 5),

Shaft_cl – position of the shaft surface (main micrometers) while system calibration (see p. 10.3.),

Shaft_sp – the current position of the shaft surface (indicated by subsidiary micrometers, see p. 5),

Shaft_cl – position of the shaft surface (subsidiary micrometers) while system calibration.

To control the current thickness indications from 9 micrometers press the Display button.

When the current indication goes beyond the tolerance, the corresponding measurement is highlighted in orange (Fig. 10).

The tolerance installation procedure is described in p. 10.4.

If the micrometer is not responding, it is highlighted in red.

The measurement results are stored in SQLite database file named «keep.db» at the root of the PDA flash drive, see p. 10.5.

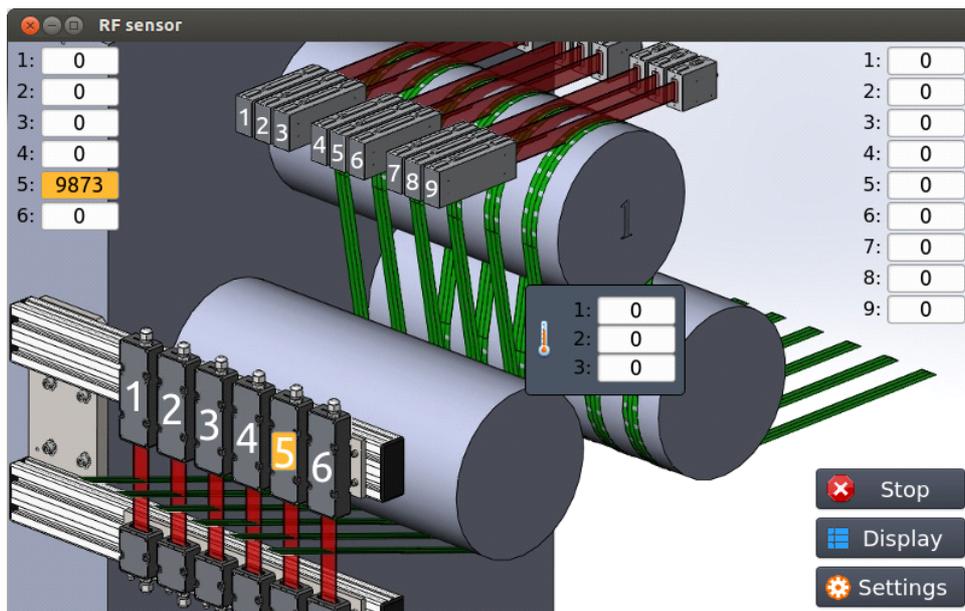


Figure 10

10.3 Calibration

10.3.1 Calibration of the thickness measurement micrometers

Calibration procedure:

- Remove tapes from the shaft.
- Start measurement process by pressing «Start».
- Open the calibration menu: **Settings > Set etalon/Sw. State** (Fig. 11).
- Select the numbers of the micrometers to be calibrated (numbers 7-15 correspond to 9 micrometers of the tape thickness control subsystem).
- Make sure that the **Etalons** mode is selected and the **Set** option in the **Mode** field is on, then press the **Apply** button.

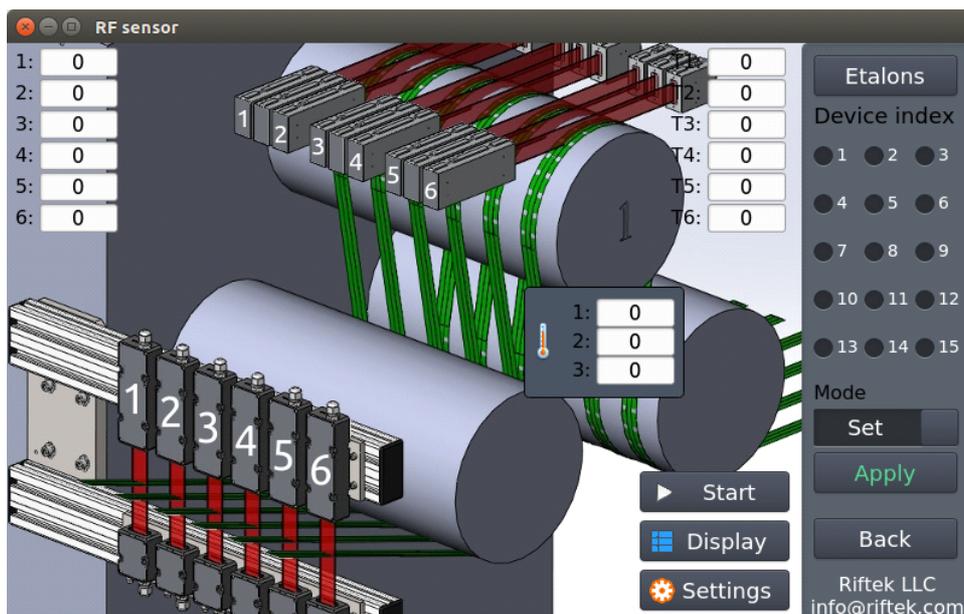


Figure 11

10.3.2 Thermometers calibration

- Stop the calibration process by pressing **Stop** button.
- Open the calibration menu **Settings > Calibration** (Fig. 12).
- Choose the number of temperature sensor (**Sensor index** field).
- Direct the sensor to the surface with stated temperature, having entered the temperature value in **Temp. 1** or **Temp. 2** field and press **Set** button. When the operation is finished successfully the message **Calibration parameter has been successfully** set appears. Detailed information on temperature sensors can be found in OMEGA OS136-1-MA documentation.
- Perform the operation described in the previous paragraph for two different temperatures. By pressing the **Set** button the previous calibration value is overwritten.

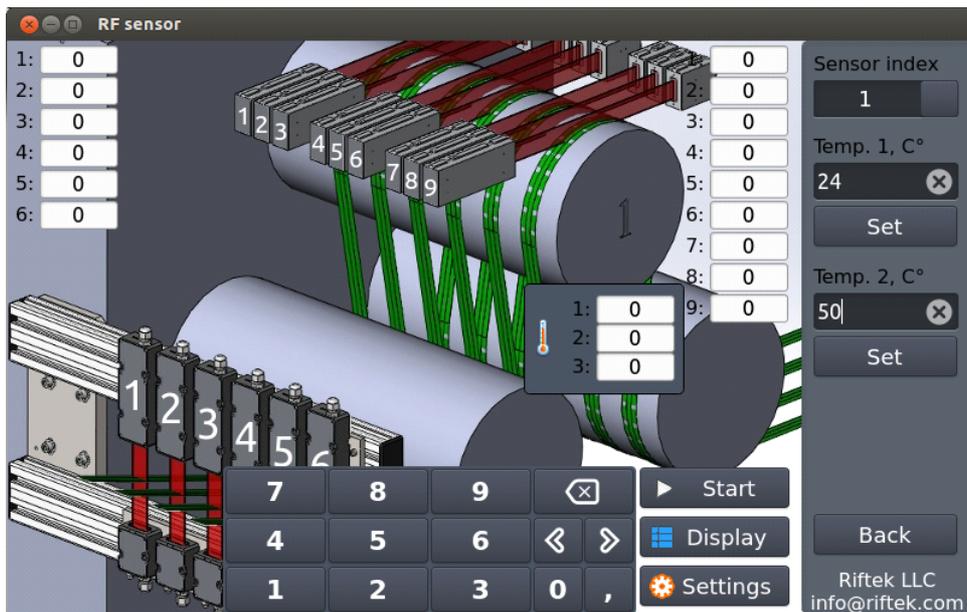


Figure 12

10.4 Settings

All sensors in the system are numbered (Index) from 1 to 18, where the 1-6 match the sensors 1-6 from width measurement group of sensors, numbers 7-15 in the Settings match the sensors 1-9 from width measurement group of sensors and numbers 16-18 match the three temperature sensors. Indexes T1-T6 indicates the results of indirect thickness measurement.

To perform the system settings enter the **General** menu:

- In the **Timeout** field the delay in milliseconds between successive cycles of the sensors polling is set.
- To set the tolerances choose the number of the sensor in the **Index** field and set the upper and lower limits in the fields **Upper limit** and **Lower limit** correspondingly.
- To set the production task number use the field **Task Number**.
- To enable or disable the recording of measurements in the database, use the field **Save log**.
- With the use of **Time** and **Date** fields the system date and time can be set.
- In the **Free space** field the empty space on a removable device is shown (micro SD card).
- To apply polling period and tolerances settings press **Apply**.
- To undo all the changes press **Discard**.
- To add/remove the devices participating in the poll and to calibrate micrometers enter the menu **Set etalon/Sw. State**. The top button also serves as an indicator and switch modes, namely, **States** – the mode of active devices selection is active;

Etalons – the mode of setup/reset of micrometers calibration is active. Use the **States** function to disable the devices that are not used in the polling during the system operation. It is necessary when the device is faulty or is not in use, neglecting the recommendation above may cause long delays while polling and therefore the entire system delay. The use of the **Etalons** mode is described in p. 10.3.1.

- To set the number of measurements used to calculate an average value use the **Averaging** field.

10.5 Measurement journal


During operation the system generates measurement journal. To view the measurement log enter the **Journal** menu (Fig. 13). This menu is intended for viewing the measurements stored on a flash drive in the SQLite database file named keep.db. Each entry has the following structure:

- Time – measurement time.
- Task – production task number.
- Type – measurement type (temperature, width, thickness).
- Measure # – number of measurement of a particular type (Corresponds to the Index notion, described in the paragraph 10.4).
- Value – measured/calculated value.

To display the item you need use the filters:

- Time range – time range selection.
- Values range – selection of the displayed measured values range.
- Task – production task number.
- Type – measurement type (Device – value received from the device; Thickn. – calculated thickness; Temp. - temperature).
- Measure # – number of the measurement device of a particular type.

In order to fulfill the request to display the records matching the selected filters, click **Apply**. To reset the filter values to their default values, click **Clear**. Table with records supports vertical scrolling, sorting by columns by clicking on the table top and row highlighting. By default, sorting is done on time: first the records that were saved before. Table records can be saved in the root of the flash drive as * .csv file. In .csv files the columns are separated with a semicolon. Click **Export CSV** to save the file. The name of the file includes the date and time when it was saved. After the file was saved the message (Fig. 14) appears.

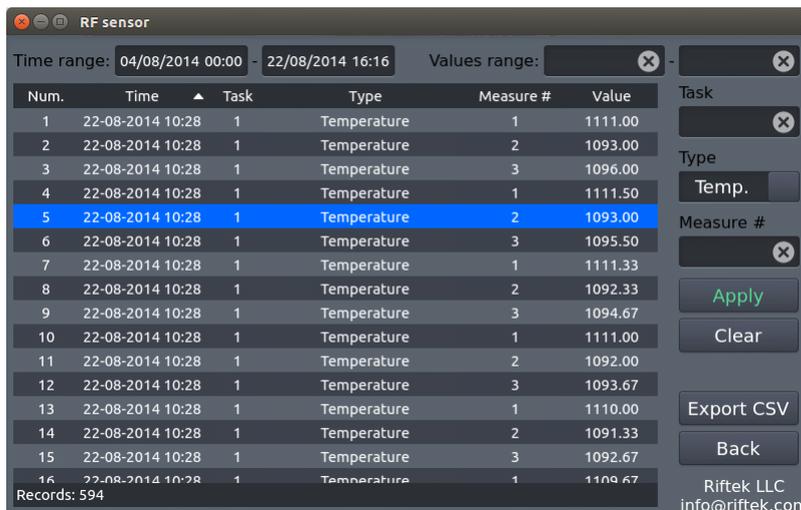

Num.	Time	Task	Type	Measure #	Value
1	22-08-2014 10:28	1	Temperature	1	1111.00
2	22-08-2014 10:28	1	Temperature	2	1093.00
3	22-08-2014 10:28	1	Temperature	3	1096.00
4	22-08-2014 10:28	1	Temperature	1	1111.50
5	22-08-2014 10:28	1	Temperature	2	1093.00
6	22-08-2014 10:28	1	Temperature	3	1095.50
7	22-08-2014 10:28	1	Temperature	1	1111.33
8	22-08-2014 10:28	1	Temperature	2	1092.33
9	22-08-2014 10:28	1	Temperature	3	1094.67
10	22-08-2014 10:28	1	Temperature	1	1111.00
11	22-08-2014 10:28	1	Temperature	2	1092.00
12	22-08-2014 10:28	1	Temperature	3	1093.67
13	22-08-2014 10:28	1	Temperature	1	1110.00
14	22-08-2014 10:28	1	Temperature	2	1091.33
15	22-08-2014 10:28	1	Temperature	3	1092.67
16	22-08-2014 10:28	1	Temperature	1	1109.67

Records: 594

Figure 13

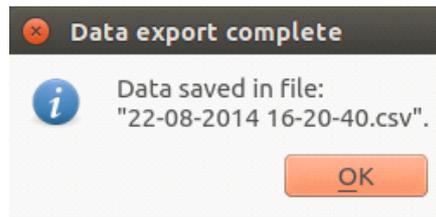


Figure 14

NOTE. To enter the date and time values are special graphics components shown in Figures 15 and 16, respectively. To enter numeric values use keypad, Figure 17.

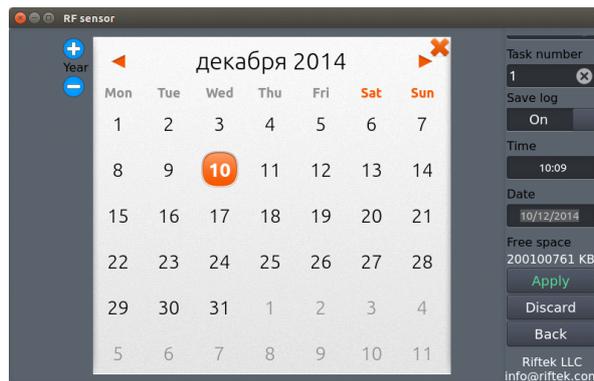


Figure 15



Figure 16



Figure 17

When typing the corresponding values the keyboard appears automatically.

11 Intended use

11.1 Prepatation for use

Preparation of the system includes:

- external inspection;
- set up on a conveyer;
- switching the system;
- calibrating the system;
- system setup.

11.1.1 External inspection

Before operating it is needed to ensure of the serviceability of the equipment, check the cables, ground wires. Check the condition of output windows of the scanner and, if necessary, wipe them with a soft cloth.

11.1.2 Set up on a conveyer

Install the system on a conveyer according to the Fig. 2-5 of this manual. Make the electrical connections in accordance with Fig. 8.

11.1.3 Switching the system

Apply power to the system.

11.1.4 Calibrating the system

Calibrate the machine according to Paragraph 10.3.2. Calibration should be held:

- on a weekly basis before the work shifts,
- if the position of the system was changed,
- when the ambient temperature has changed (several degrees in average per day in relation to the previous day).

11.1.5 Configuring system settings

Configure the settings according to Paragraph 10.4 and 10.5.

11.1.6 Checking the system

To check the functionality of the system conduct a full cycle control of the geometrical parameters of the control sample tape. It is recommended to conduct at list one functional test of the system in a month.

11.2 Operating the system

The geometric parameters measurement cycle is fully automated and operation of the system is reduced to the work with the program.

- prepare the system according to Paragraph 11.1.
- to start the measurement process press the **Start** button.

12 Maintenance

12.1 General instructions

Maintenance of the system is carried out to ensure constant-ready status and continued availability of its work and to prevent premature failure. Maintenance includes preventive measures aimed at identification and elimination of defects and to ensure the normal operation while installation and working. It is recommended to conduct the daily, weekly and annual maintenance work.

12.2 Safety precautions

During the installation maintenance security measures outlined in Paragraph 1 should be observed.

12.3 Maintenance procedure

12.3.1 Daily maintenance work

Daily maintenance includes:

- visual inspection of the system,
- checking of completeness,
- checking for any damage of the structural elements, power and instrument cables, indicators and connectors,
- weakening of screw connections and insulation failures,

- before starting work, it is necessary to clean the output micrometer windows with a soft dry cloth.

12.3.2 Regular maintenance work

Regular maintenance work includes:

- cleaning of micrometer windows with a dry soft lint-free cloth from contamination of dirt.

12.3.3 Yearly maintenance work

Authenticated calibration of the micrometers should be made once a year.

12.4 Operability test

It is recommended to conduct the functional test at least once at the beginning or during the shift, for what it is necessary to complete full cycle control of the geometrical parameters of the control sample (not supplied).

13 Warranty policy

Warranty assurance for the system - 12 months from the date of putting in operation; warranty shelf-life - 12 months.

14 Distributors

AUSTRALIA

**Applied Measurement
Australia Pty Ltd**

RAILWAY INSTRUMENTS ONLY

Thornton Plaza, Unit 5,
27 Thornton Crescent, Mitcham
VIC 3132, Australia
Tel: +61 39874 5777
Fax: +61 39874 5888
sales@appliedmeasurement.com.au
www.appliedmeasurement.com.au

BELGIUM

**Althen Sensors & Controls
BV**

Verrijn Stuartlaan 40, 2288 EL,
Rijswijk, Leidschendam
The Netherlands
Tel: +31 0 70 392 4421
Tel: +31 0 61 396 7830
Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

BOSNIA AND HERZEGOVINA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**

ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

BRAZIL

**CAPI Controle
e Automação Ltda**

Rua Itororó, 121, CEP 13466-240
Americana-SP, Brazil
Tel: +55 19 36047068
Fax: +55 19 34681791
capi@capicontrol.com.br
www.capicontrol.com.br

BULGARIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**

ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

CHILE

MOL INGENIERIA LTDA
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**

República de Honduras 11936
Las Condes, Santiago de Chile
Tel: +56 9 59200362
hconcha@molingeneria.com
www.molingeneria.com

CHILE

Verne SpA

Apoquindo 2818, oficina 31
Las Condes, Santiago, Chile
Tel: +56 2 228858633

info@verne.cl
jsaavedra@verne.cl
www.verne.cl

CHINA

Beijing Gemston Mechanical & Electrical Equipment Co., Ltd

RAILWAY INSTRUMENTS ONLY
Room 613, Anfu Mansion, Fengtai
District, Beijing, China

Tel: +86 10 6765 0516
Fax: +86 10 6765 6966
Mobile: +86 137 1755 1423
dh0526@163.com
www.baoft.cn

CHINA

Zhenshangyou Technologies Co., Ltd

Rm 2205-2210, Zhongyou Hotel
1110 Nanshan Road, Nanshan
District 518054 Shenzhen, China
Tel: +86 755-26528100/8011/8012
Fax: +86 755-26528210/26435640

info@51sensors.com
www.51sensors.com

DENMARK

BLConsult

Ryssbält 294
95 291 Kalix, Sweden
Tel: +46 70 663 19 25

info@blconsult.se
www.blconsult.se

FINLAND

TERÄSPYÖRÄ-STEELWHEEL OY

RAILWAY INSTRUMENTS ONLY
Juvan teollisuuskatu 28
FI-02920 ESPOO, Finland
Tel: +358 400 422 900
Fax: +358 9 2511 5510

steelwheel@steelwheel.fi
www.teraspynora.fi

CHINA

Beijing Haiwei Lutong Technology Co., Ltd

Yard 1, Tianxing Street, Fangshan
District, Beijing, China

Tel: +86 10 8366 1866
Fax: +86 10 8366 1866
info@haiwlt.com
www.haiwlt.com

CHINA

Xi'an Win-Success Automation Technology Co.,Ltd

Room 3-1-1039, Iduhui Building,
No.11 Tangyan South Road
High-Tech Zone, Xi'an
Shaanxi PRC, China

Tel: +86 29 81106280
Fax: +86 29 81106285
Mob: +86 133 19271405
info@maxsensor.com
www.maxsensor.com

CROATIA

ASCO RAIL sp. z o.o.**EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT**

ul. Wielowiejska 53, 44-120
Pyskowice, Poland

Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34

biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

ESTONIA

FoodLab OÜ

Haabersti linnaosa, Astangu tn 52
13519 Eesti, Tallinn, Estonia
Tel: +372 56 363110

foodlab.ee@gmail.com

FRANCE

BLET Measurement Group S.A.S.

1 avenue du Président Georges
Pompidou, 92500 Rueil
Malmaison, France

Tel: + 33 0 1 80 88 57 85
Fax: +33 0 1 80 88 57 93
technique@blet-mesure.fr
www.blet-mesure.fr

CHINA

Chongqing Wolf Industrial Technology Co., Ltd

Room 2307 / 2308, Light of City
international business building,
No. 19 Jiangnan Avenue, Nan'an
District, Chongqing, China

Tel: 023 62832618
Fax: 023 62832113
info@wolf-hk.com
www.wolf-hk.com

CHINA

Micron-Metrology co., Ltd

No.2, Kecheng Rd., Industrial Park
District, Suzhou,
Jiangsu Province., China

Tel: 0512 65589760
Mob: +86 189 1806 9807
sales@micron-metrology.cn
www.micron-metrology.cn

CZECH REPUBLIC

ASCO RAIL sp. z o.o.**EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT**

ul. Wielowiejska 53, 44-120
Pyskowice, Poland

Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34

biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

FINLAND

Kvalitest Industrial AB**EXCEPT FOR RAILWAY INSTRUMENTS**

Ekbacksvägen 28,
16869 Bromma, Sweden
Tel: +46 0 76 525 5000

sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

GERMANY

Disynet GmbH

Breyeller Str. 2, 41379
Brueggen, Germany
Tel: +49 2157 8799 0
Fax: +49 2157 8799 22

disynet@sensoren.de
www.sensoren.de

GERMANY

Finger GmbH & Co. KG
OPTICAL MICROMETERS ONLY
Sapelloh 172, 31606
Warmßen, Germany
Tel: +49 5767 96020
Fax: +49 5767 93004
finger@finger-kg.de
www.finger-kg.de

INDIA

Influx Big Data Solutions Pvt Ltd
No:2, Krishvi, Ground Floor,
Old Airport Road, Domlur,
Bangalore - 560071, India
Tel: +91 73 37748490
Tel: +91 94 48492380
milan@influxtechnology.com
support_india@influxtechnology.com
www.influxtechnology.com

ISRAEL

Nisso Dekalo Import Export LTD
1 David Hamelech Street
Herzlia 46661 Israel
Tel: +972 99577888
Fax: +972 99568860
nissodekaloltd@outlook.com
www.fly-supply.net
www.aircraft-partsupply.com

LATVIA

FoodLab OÜ
Haabersti linnaosa, Astangu tn 52
13519 Eesti, Tallinn, Estonia
Tel: +372 56363110
foodlab.ee@gmail.com

MONTENEGRO

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

GERMANY

ALTHEN GmbH Meß- und Sensortechnik
Dieselstrasse 2, 65779
Kelkheim, Germany
Tel: +49 0 6195 7 00 60
info@althen.de
www.althensensors.com/de/

INDIA

Paragon Instrumentation Engineers Pvt. Ltd.
RAILWAY INSTRUMENTS ONLY
200, Station Road,
Roorkee, 247 667, India
Tel: +91 1332 272394
tanuj@paragoninstruments.com
www.paragoninstruments.com

ITALY

FAE s.r.l.
Via Tertulliano, 41
20137 Milano, Italy
Tel: +39 02 55187133
Fax: +39 02 55187399
fae@fae.it
www.fae.it

LUXEMBOURG

Althen Sensors & Controls BV
Verrijn Stuartlaan 40, 2288 EL,
Rijswijk, Leidschendam
The Netherlands
Tel: +31 0 70 392 4421
Tel: +31 0 61 396 7830
Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

NETHERLANDS

Althen Sensors & Controls BV
Verrijn Stuartlaan 40, 2288 EL,
Rijswijk, Leidschendam
The Netherlands
Tel: +31 0 70 392 4421
Tel: +31 0 61 396 7830
Tel: +31 0 64 323 8393
sales@althen.nl
info@althen.nl
www.althensensors.com

HUNGARY

ASCO RAIL sp. z o.o.
EXCLUSIVE REPRESENTATIVE FOR RAILWAY EQUIPMENT
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

INDONESIA

PT. DHAYA BASWARA SANIYASA
Botanic Junction Blok H-9 NO. 7
Mega Kebon Jeruk, Joglo
Jakarta, 11640, Indonesia
Tel: +62 21 2932 5859
management@ptdbs.co.id

JAPAN

Tokyo Instruments, Inc.
6-18-14 Nishikasai, Edogawa-ku,
Tokyo, 134-0088 Japan
Tel: +81 3 3686 4711
Fax: +81 3 3686 0831
f_kuribayashi@tokyoinst.co.jp
www.tokyoinst.co.jp

MALAYSIA

OptoCom InstruVentures
H-49-2, Jalan 5, Cosmoplex
Industrial Park, Bandar Baru
Salak Tinggi, Sepang, Malaysia
Tel: 603 8706 6806
Fax: 603 8706 6809
optocom@tm.net.my
www.optocom.com.my

NORWAY

BLConsult
Ryssbält 294,
95 291 Kalix, Sweden
Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

NORWAY

Salitec AS
PB 468, N-1327
Lysaker, Norway
Tel: +47 23 891015
Fax: +47 92101005
mail@salitec.no
www.salitec.no

PERU

Verne Perú S.A.C.
Las Codornices 104,
Surquillo, Lima, Peru
Tel/fax: +51 992436734
info@verne.cl
www.verne.cl

POLAND

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

POLAND

RIFTEK EUROPE sp. z o.o.
ul. Domaniewska 17/19, 02-672
Warsaw, Poland
info@riftek.com
www.riftek.com

PORTUGAL

**Campal Inovacoes
Ferroviarias Lda.**
Lagoas Park, Edificio 7, 1° Piso
Sul, 2740-244 Porto Salvo, Oeiras,
Portugal
Tel: +351 21 584 4348
campal@campal.pt
www.campal.pt

SERBIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SLOVAKIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SLOVENIA

ASCO RAIL sp. z o.o.
**EXCLUSIVE REPRESENTATIVE
FOR RAILWAY EQUIPMENT**
ul. Wielowiejska 53, 44-120
Pyskowice, Poland
Tel: +48 32 230 45 70
Fax: + 48 32 233 21 34
biuro@ascorail.pl
export@ascorail.pl
www.ascorail.pl

SOUTH KOREA

BS Holdings
B-201, Wonpogongwon 1ro,
59 Danwon-gu, Ansan-si,
Gyeonggi-do 15455, Republic of
Korea
Tel: +82 31 411 5011
Fax: +82 31 411 5015
bsh5011@hanmail.net
www.lasersolution.co.kr

SOUTH KOREA

PROSEN. CO., LTD
M-1001, Songdo techno park IT
center, 32, Songdogwahak-ro,
Yeonsu-gu, Incheon, 21984,
Republic of Korea
Tel: +82 32 811 3457
Fax: +82 32 232 7458
trade@prosen.co.kr
www.prosen.co.kr

SPAIN

IBERFLUID Instruments S.A.
C/ Botanica, 122, 08908
L'Hospitalet de Llobregat
Barcelona
Tel: +34 93 447 10 65
Fax: +34 93 334 05 24
myct@iberfluid.com
www.iberfluid.com

SWEDEN

BLConsult
Ryssbält 294,
95 291 Kalix, Sweden
Tel: +46 70 663 19 25
info@blconsult.se
www.blconsult.se

SWEDEN

Kvalitest Industrial AB
**EXCEPT FOR RAILWAY
INSTRUMENTS**
Ekbacksvägen 28,
16869 Bromma, Sweden
Tel: +46 0 76 525 5000
sales@kvalitest.com
www.kvalitest.com
www.kvalitest.se

SWITZERLAND

ID&T GmbH
Gewerbstrasse 12/a
8132 Egg (Zurich), Switzerland
Tel: + 41 44 994 92 32
Fax: + 41 44 994 92 34
info@idtlaser.com
www.idtlaser.com

THAILAND

Advantech Solution Co., Ltd.
20/170 Motorway Rd.,
Kwang Pravet, Khet Pravet,
Bangkok, Thailand 10250
Tel: +662 1848705
Fax: +662 1848708
sales@advantechsolution.com
www.advantechsolution.com

TURKEY

**MAK Elektronik Malzeme
Analiz ve Kalite Kontrol
Cihazlari Dis Tic. Ltd. Sti.**

Cenap Sahabettin Sokak, No:39,
34718 Kosuyolu - Kadikoy /
Istanbul - TURKEY
Tel: +90 216 402 10 34
Fax: +90 216 402 10 35
ulastac@metalografi.net
www.makelektronik.com.tr

UNITED KINGDOM, IRELAND

Althen UK

Northamptonshire
United Kingdom
Tel: +44 0 7823 921427
t.stoyles@althen.co.uk
www.althensensors.com
www.althencontrols.com

USA, CANADA, MEXICO

**International Electronic
Machines Corporation**

RAILWAY INSTRUMENTS ONLY

850 River Street, Troy,
New York, USA
Tel: +1 518 268-1636
Fax: +1 518 268-1639
marketing@iem.net
www.iem.net

TURKEY

TEKMA Mühendislik A.S.

Cevizli Mh. M. Kemal Cd.,
Hukukçular Towers,
A-Blok, No: 66-A/39
Kartal - Istanbul
Tel: +90 216 970 1318
Tel: +90 850 840 2334
info@tekma.eu
www.tekma.eu

USA

Althen Sensors & Controls

2531 Bradley St., Oceanside, CA,
92056, USA
Tel: 858 633 3572
r.ream@althensensors.com

UKRAINE

KODA

Frunze st. 22, 61002,
Harkov, Ukraine
Tel/Fax: +38 057 714 26 54
mail@koda.com.ua
www.koda.com.ua

USA, CANADA, MEXICO

**Acuity Products of Schmitt
Industries, Inc.**

2765 NW Nicolai Street
Portland, OR, 97210, USA
Tel: +1 503 227 7908
Fax: +1 503 223 1258
sales@acuitylaser.com
www.acuitylaser.com